

GV-IP Decoder Box and GV-Pad

User's Manual V1.02



Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.



© 2012 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice. **Note: no SD card slot or local storage function for Argentina.**

GeoVision, Inc.
9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan
Tel: +886-2-8797-8377
Fax: +886-2-8797-8335
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and *GV* series products are trademarks of GeoVision, Inc. *Windows* and *Windows XP* are registered trademarks of Microsoft Corporation.

May 2012

Content

GV-IP Decoder Box

Chapter 1 Introduction	2
1.1 Features	3
1.2 Compatible Devices.....	4
1.3 Packing List.....	6
1.3 Packing List.....	6
1.4 Optional Accessories	7
1.5 Overview	8
1.5.1 Front View	8
1.5.2 Rear View.....	9
1.6 The IR Remote Control.....	10
Chapter 2 Getting Started.....	12
2.1 Installing the GV-IP Decoder Box.....	12
2.2 Connecting the GV-IP Decoder Box.....	14
2.3 Configuring the Basics.....	16
2.3.1 Setting Up the Network.....	17
2.3.2 Configuring the ID and Password	20
2.4 Displaying Channels from GV IP Devices	21
2.5 Displaying Channels Using GV IP Device Utility	23
2.6 Displaying Channels from GV-Mobile Server	28
2.7 Taking a Snapshot	30
2.8 Pausing the Looped View	31
2.9 Controlling PT, PTZ and Speed Dome Cameras.....	32
Chapter 3 System Setup.....	34
3.1 Searching IP Devices	35
3.2 Configuring the Network	35
3.3 Configuring the Play Mode	36
3.4 Adding a GV IP Device	37
3.5 Configuring the Account, Storage and Output Type	38
3.6 Upgrading the Firmware	39
3.6.1 Updating Firmware through USB Drive or SD Card	39
3.6.2 Updating Firmware through GV IP Device Utility.....	40
Specifications.....	42

GV-Pad

Chapter 4 Introduction	44
4.1 Features	45
4.2 Compatible Devices	45
4.3 Packing List	45
4.4 Optional Accessories	46
4.5 Overview	47
4.5.1 Right Panel View	47
4.5.2 Left Panel View	48
4.6 The IR Remote Control	50
Chapter 5 Getting Started	51
5.1 Installing the GV-Pad	51
5.2 Connecting the GV-Pad	52
5.3 Configuring the Basics	53
5.3.1 Setting Up the Network	53
5.3.2 Configuring the ID and Password	53
5.4 Displaying Channels and Using the GV-Pad	54
Chapter 6 System Setup	55
Specifications	56

GV-IP Decoder Box



Chapter 1 Introduction

The GV-IP Decoder Box is designed to decode incoming IP streams from GeoVision and third-party IP devices, and displaying them on a monitor. To be used with only a monitor, the GV-IP Decoder Box provides a cost-effective solution for video surveillance as opposed to the traditional DVR and PC setup. The security administrator can monitor channels, take snapshots of critical moments, and pause at a channel when events occur, all through the supplied remote control. GV-Joystick can be installed to control GeoVision and third-party PT / PTZ / Speed Dome cameras.

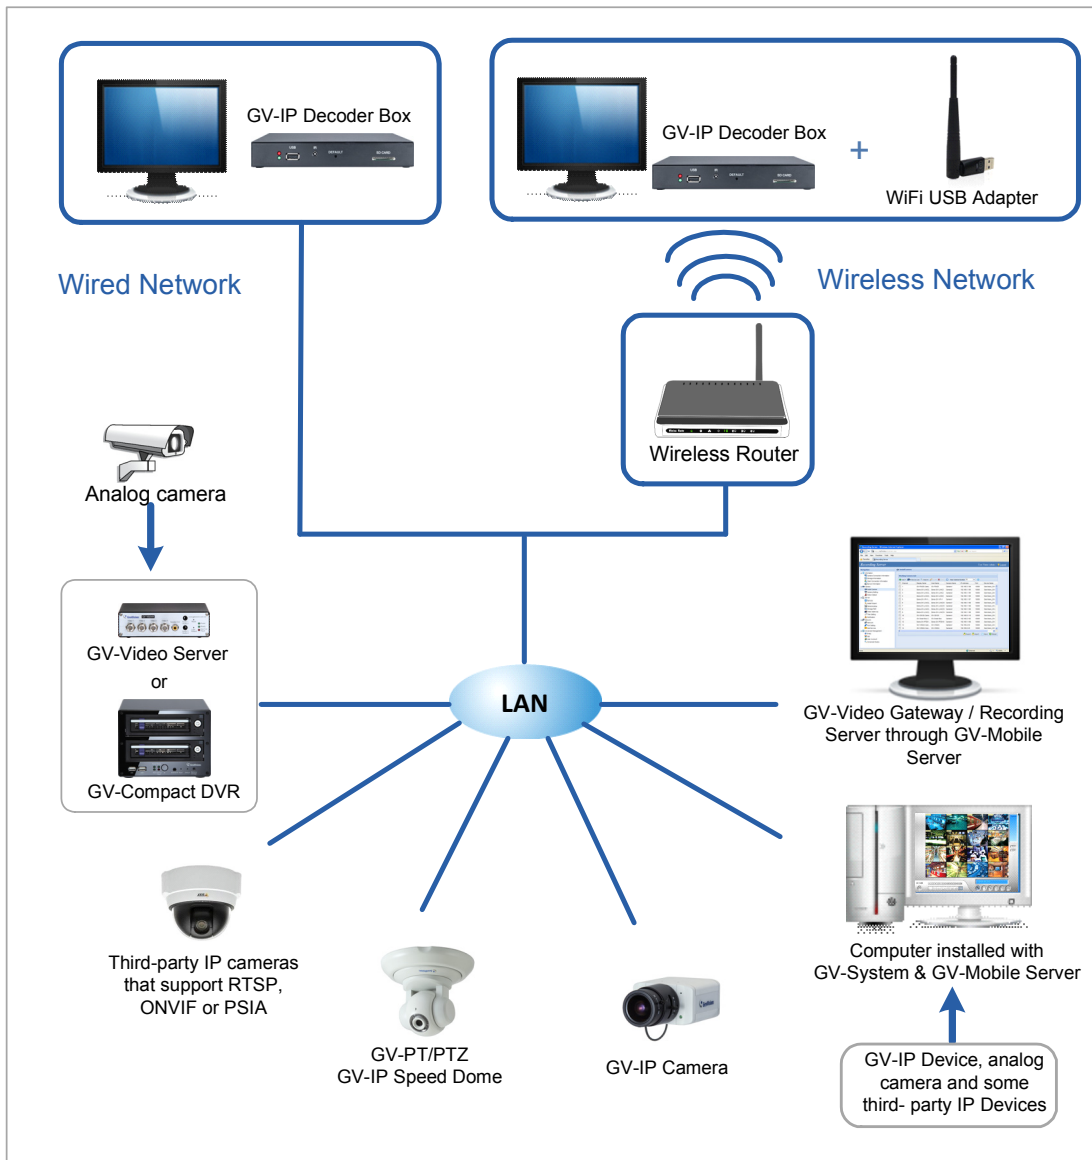


Figure 1-1

1.1 Features

- Decode video streams in H.264 codec at a maximum frame rate of the IP device
- Decode up to 5 megapixel IP cameras
- Decode up to 64 IP streams
- Support for third-party IP cameras that adhere to RTSP, ONVIF or PSIA
- Support for display of Matrix view through GV-Mobile Server
- Support for 10/100 Ethernet over LAN
- Support for Wi-Fi
- Support for single and sequential display
- VGA and HDMI Video outputs
- Video output resolution up to 1080p
- Support for GV-Joystick control of GV-PTZ010D, GV-PT110D , GV-IP Speed Dome and third-party PTZ / Speed Dome cameras
- Support for remote firmware upgrade, IP address configuration and addition of new channel
- IR remote control
- SD card and USB drive for snapshot storage and firmware upgrade

1.2 Compatible Devices

The GV-IP Decoder Box is compatible with:

1. Most GeoVision IP devices (of the indicated firmware versions) using H.264 codec
2. GV-SD200 using H.264 codec through ONVIF
3. Third-party IP devices that support H.264 and adhere to RTSP, ONVIF or PSIA

Supported GeoVision IP Devices		
Device Type	Models	Firmware Versions
Box Camera	GV-BX110D	V1.08 or later
	All models (except GV-BX110D)	V1.06 or later
Bullet Camera	GV-BL110D	V1.08 or later
	All models (except GV-BL110D)	V1.06 or later
Cube Camera Fixed Dome Vandal Proof IP Dome	All models	V1.06 or later
Mini Fixed Dome	GV-MFD110	V1.08 or later
	All models (except GV-MFD110)	V1.06 or later
PT Camera PTZ Camera	GV-PT110D GV-PTZ010D	V1.08 or later
Speed Dome	GV-SD010	V1.02 or later
	GV-SD200	V1.0 or later
Video Server	GV-VS04H	V1.04 or later
	GV-VS11	V1.0 or later
	GV-VS12	V1.05 or later
Compact DVR	GV-Compact DVR V3 series only	V1.0 or later
<p>IMPORTANT: The connected GeoVision and third-party channels must be set with H.264 codec to be compatible.</p>		


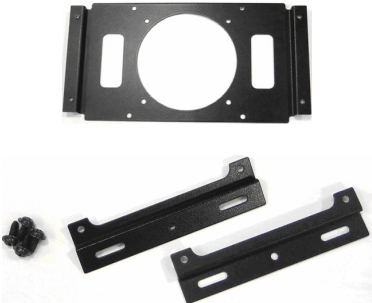


To decode and display **non-H.264** IP channels or **analog** channels, connect the devices to GV-System and access them through GV-Mobile Server. The supported devices are listed below.

Supported Devices Connected to GV-System
Analog cameras
All models of GeoVision IP cameras, GV-Video Server, GV-Compact DVR, GV-IP Speed Dome, GV-Smart Box and GV-DSP LPR
11 brands of third-party IP cameras. For detail, see http://www.geovision.com.tw/english/4_21.asp

1.3 Packing List

1. GV-IP Decoder Box × 1
2. IR remote control × 1
3. AC/DC adapter × 1 (12 V, 3 A, 36 W)
4. Power cord x 1
5. Software DVD x 1
6. GV-IP Decoder Box / GV-Pad Quick Start Guide

1.4 Optional Accessories

Optional Accessories	Detail
<p>Wall Mount Kit</p> 	<p>The Wall Mount Kit is used to mount the GV-IP Decoder Box to the wall.</p> <ul style="list-style-type: none"> ● L-type brackets x 2 ● Small screws x 4
<p>VESA Monitor-Mount Kit</p> 	<p>The VESA Monitor Mount Kit is used to mount the GV-IP Decoder Box to the back of a VESA monitor.</p> <ul style="list-style-type: none"> ● VESA monitor mount bracket x 1 ● L-type brackets x 2 ● Large screws x 4 ● Small screws x 8
<p>GV-Joystick</p> 	<p>The GV-Joystick facilitates focusing, zooming, panning, tilting of GeoVision and third-party PT, PTZ and Speed Dome cameras on GV-IP Decoder Box.</p> <ul style="list-style-type: none"> ● GV-Joystick x 1 ● USB Type A to Type B Cable x 1 ● GV-Joystick User's Manual x 1
<p>GV-WiFi USB Adapter</p> 	<p>The GV-WiFi USB adapter is a plug-and-play device that provides wireless connectivity to GeoVision IP devices. The GV-WiFi USB Adapter complies with IEEE802.11 b/g/n (Draft 3.0) standards for wireless networking.</p>

1.5 Overview

This section identifies the components of the GV-IP Decoder Box.

1.5.1 Front View



Figure 1-2

No.	Name	Function
1	LED Indicators	The green LED indicates the system is ready for use. The red LED indicates the power is supplied.
2	USB	Connect to a GV-Joystick, a USB storage device or a GV-WiFi USB adapter.
3	IR	Built-in IR receiver to receive the IR signals from the IR remote control.
4	Default	Reset the GV-IP Decoder Box to the default factory settings. Use a pin to press the default button until the green LED fades. This will take about 10 seconds. The system will then reset and reboot itself shortly.
5	SD Card Slot	Connect to an SD card for local storage of snapshot and firmware upgrade.

1.5.2 Rear View

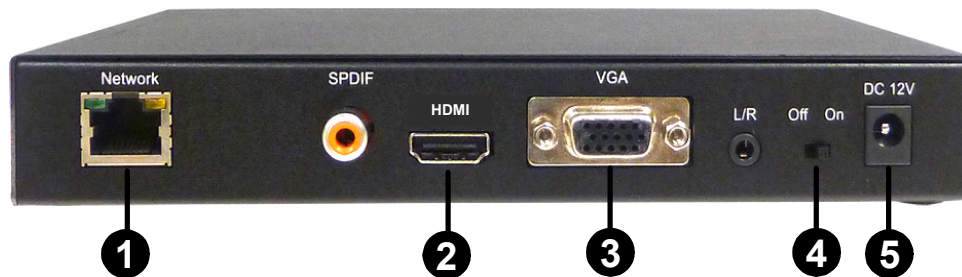


Figure 1-3

No.	Name	Function
1	Network	Connect to the network.
2	HDMI	Connect to an HDMI supported display device.
3	VGA	Connect to a VGA monitor.
4	Power OFF/ON	Switch the power on or off.
5	DC 12V	Connect to power by using the supplied power adapter.

Note: The SPDIF and L/R ports are not functional.

1.6 The IR Remote Control

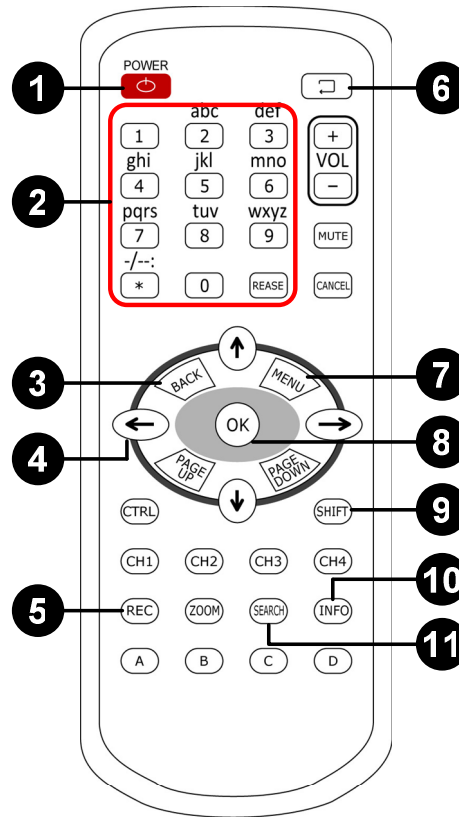


Figure 1-4

No.	Name	Function
1	Power	Turn on or off the GV-IP Decoder Box.
2	Numeric / Alphabetical / Punctuation Marks keys	Enter numbers, alphabets or punctuation marks.
3	Back	Back to the previous page in the Setup Menu.
4	Arrow	<ul style="list-style-type: none"> ● Move up, down, right and left in the Setup Menu. ● Right arrow key: select a channel on the Device List. ● Left arrow key: unselect a channel on the Device List.
5	REC	Capture a snapshot.

No.	Name	Function								
6	Loop Start / Stop	<ul style="list-style-type: none"> Start or stop sequential display. Display and fix at a channel: press the Loop Start / Stop key, a numeric key and OK to display and fix at the selected channel. Press 0 and OK to return to the last displayed channel. 								
7	Menu	Switch to the setup menu.								
8	OK	<ul style="list-style-type: none"> Save settings in the Setup Menu. Display selected channels. 								
9	Shift	<p>Switch among 8 resolution options.</p> <ol style="list-style-type: none"> Press the Shift key. The Green LED on the front panel flashes. Press No. 0 ~ 7 for the desired resolution within 30 seconds. <table style="margin-left: 40px;"> <tr> <td>0 : VGA_640 x 480</td> <td>4 : HDMI_480p</td> </tr> <tr> <td>1 : VGA_1024 x 768</td> <td>5 : HDMI_720p</td> </tr> <tr> <td>2 : VGA_1280 x 768</td> <td>6 : HDMI_1080i</td> </tr> <tr> <td>3 : VGA_1366 x 768</td> <td>7 : HDMI_1080p</td> </tr> </table> <p>Note after the resolution is configured, the green LED will fade and GV-IP Decoder Box will reboot automatically.</p>	0 : VGA_640 x 480	4 : HDMI_480p	1 : VGA_1024 x 768	5 : HDMI_720p	2 : VGA_1280 x 768	6 : HDMI_1080i	3 : VGA_1366 x 768	7 : HDMI_1080p
0 : VGA_640 x 480	4 : HDMI_480p									
1 : VGA_1024 x 768	5 : HDMI_720p									
2 : VGA_1280 x 768	6 : HDMI_1080i									
3 : VGA_1366 x 768	7 : HDMI_1080p									
10	INFO	Shows the camera name and total number of cameras under display.								
11	SEARCH	Scan for available Access Points or wireless stations when wireless network is selected.								

Chapter 2 Getting Started

2.1 Installing the GV-IP Decoder Box

You can install the GV-IP Decoder Box on wall, behind a VESA monitor or simply use it as desk mount device.

Wall Mount Installation

For wall mount installation, you need to purchase the wall mount kit.

1. Unscrew the 4 screws on the back panel of the GV-IP Decoder Box.

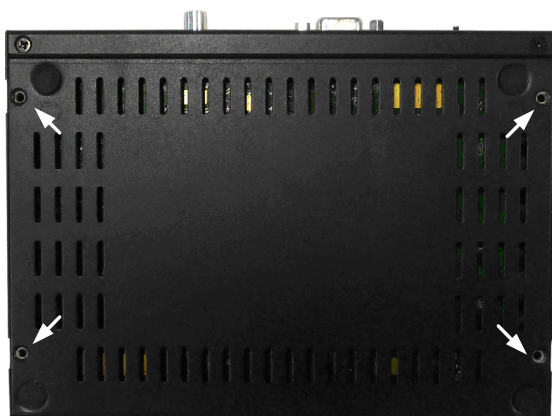


Figure 2-1

2. Use the 4 small screws in the package to tighten the L-type brackets on the GV-IP Decoder Box.

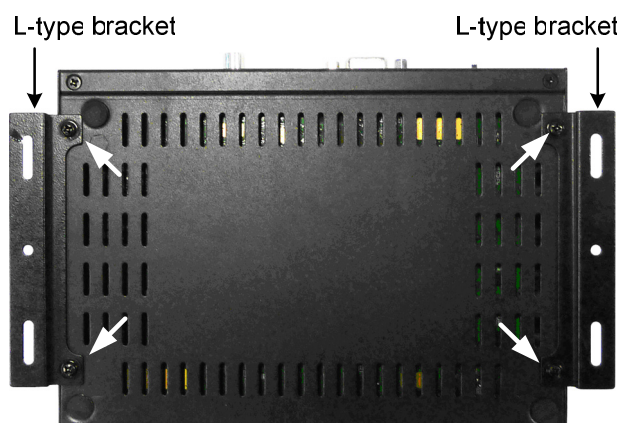


Figure 2-2

3. Secure the GV-IP Decoder Box to the wall with self-prepared screws.

VESA Monitor Mount

For VESA monitor mount, you need to purchase VESA Monitor mount kit.

1. Follow steps 1 and 2 in *Wall Mount Installation* to install the L-type brackets on the back panel of GV-IP Decoder Box.
2. Attach the VESA monitor mount bracket to the back of the computer monitor with 4 large screws.



Figure 2-3

3. Secure the GV-IP Decoder Box with the VESA monitor mount bracket with 4 small screws.

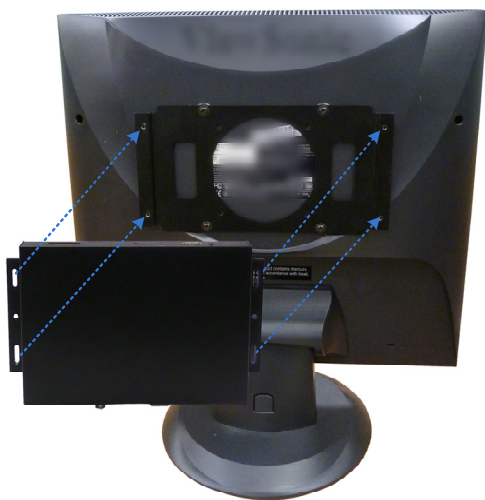


Figure 2-4

2.2 Connecting the GV-IP Decoder Box

Follow the steps below to connect the GV-IP Decoder Box:

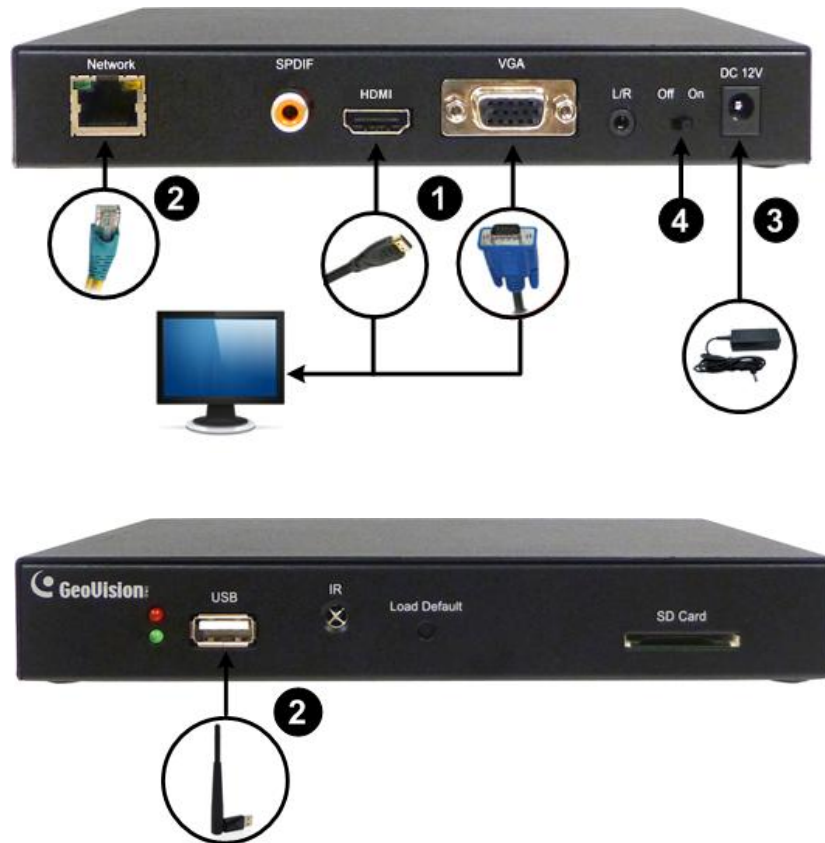


Figure 2-5

1. Connect a display device to VGA connector or HDMI connector for video output.
2. Connect the device to LAN.
 - A. For wired network, connect to a standard network cable.
 - B. For wireless network, insert a Wi-Fi USB adapter.
3. Connect to power using the supplied power adapter.
4. Turn the Power switch to ON.

Note:

1. You can only connect the GV-IP Decoder Box to one display device through the HDMI or VGA connector.
 2. The default video output is set to VGA with 1024 x 768 resolutions. If you use an HDMI monitor, be sure to change the output type. To change the default setting or configure the output type, see *3.5 Configuring the Account, Storage and Output Type*.
-

2.3 Configuring the Basics

The default IP address, ID and password of GV-IP Decoder Box are as below:

Default Settings	
IP Address	Randomly assigned by the DHCP server
ID & Password (for logging in GV-IP Decoder Box from GV-IP Device Utility)	admin / admin
ID & Password (for connecting GV-IP Decoder Box and GV IP devices)	admin / admin

Note: When connecting GV IP devices to GV-IP Decoder Box (see [2.4 Displaying Channels from GV IP Devices](#)), the GV IP devices need to have the same ID and password set on the GV-IP Decoder Box.

2.3.1 Setting Up the Network

After you have connected the necessary wires and cables, set up a wired or a wireless network connection for the GV-IP Decoder Box.

Wired Network Connection

If you have connected your device for a wired network connection, by default, the device will be **automatically assigned an IP address** by the DHCP server without further settings. To change the IP address to a fixed one, follow the steps below.

1. Select the  icon, select **LAN Setting** and press **OK**. This window appears.

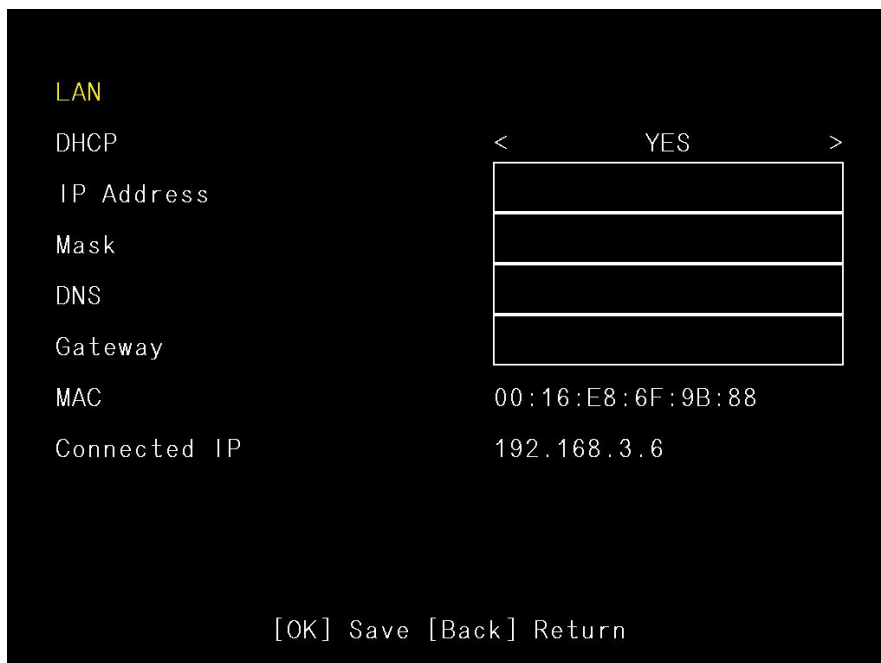


Figure 2-6

2. Select **NO** in the DHCP section and enter a fixed IP address, subnet mask and DNS and gateway.
3. Press **OK** to save the settings. When the device is connected to the Internet, the IP address will be shown in the **Connected IP** field.

Tip: You may also use GV IP Device Utility to modify the IP address by clicking the GV-IP Decoder Box and selecting **Configure**.

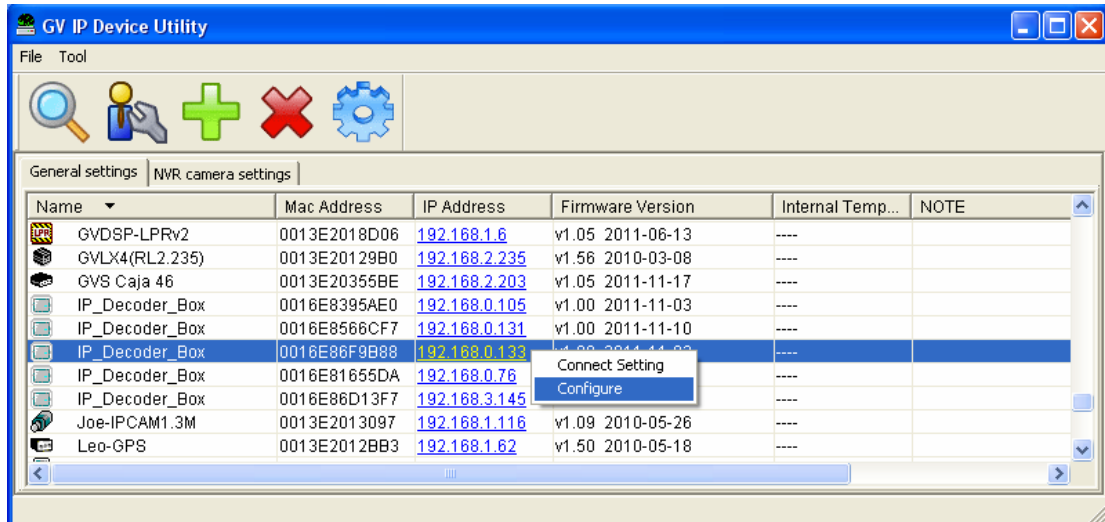


Figure 2-7

Wireless Network Connection

A GV-WiFi USB Dongle is required to connect the device to wireless network. Follow the steps below to establish a wireless network connection.

Note: The GV-IP Decoder Box only supports dynamic IP address assignment (DHCP) in a wireless network.

1. Select the  icon, select **WLAN Setting** and press **OK**. This window appears.

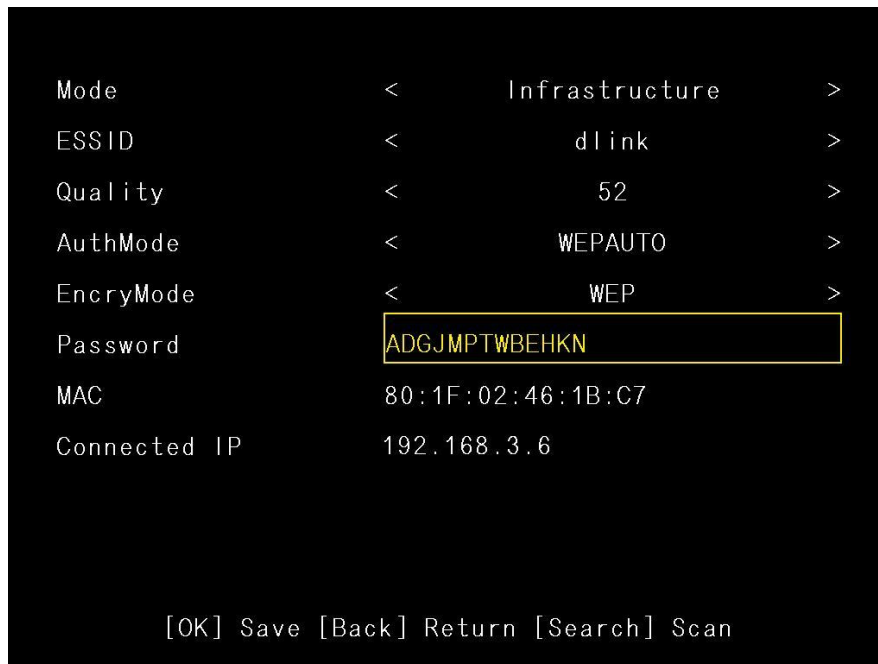


Figure 2-8

2. Press the **Search** button to scan for available Access Points / wireless stations.
3. Select an Access Point / wireless station in the **ESSID** field and complete the settings below.
 - **ESSID:** Shows the name of the Access Point. Press the left and right button to select an Access Point.
 - **Quality:** Shows the connection quality on a scale of 1 to 100 with 100 being the highest quality.
 - **AuthMode:** Select **WEP Auto** or **WPAPSK** according to the encryption setting of the Access Point.
 - **EncryMode:** Select the Encryption Mode according to the encryption setting of the Access Point.
 - **Password:** Type a password to match the Access Point. You can type up to 26 characters.
4. Press **OK** to save the settings and connect to wireless LAN. When the device is connected to the Internet, the IP address will be shown in the **Connected IP** field.

2.3.2 Configuring the ID and Password

1. To configure ID and password for logging in GV-IP Decoder Box, follow the steps below.

- A. On the main menu, select the  icon and press **OK**. This window appears.

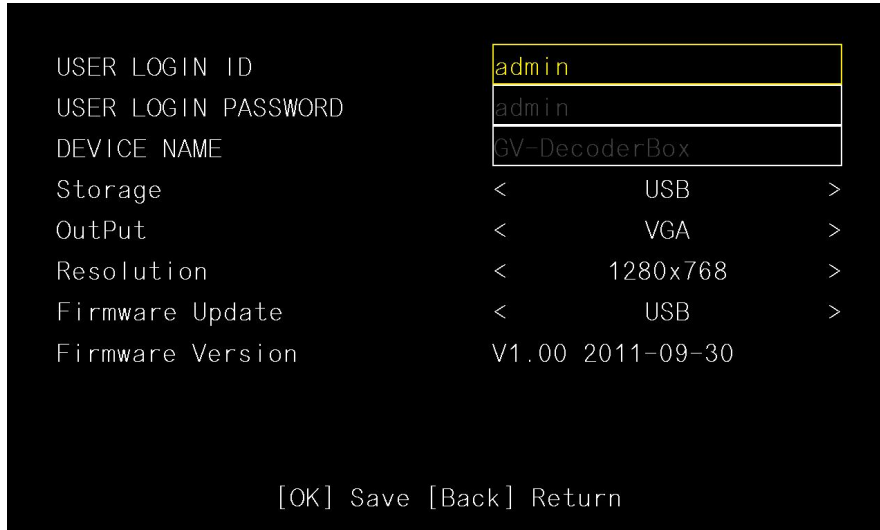


Figure 2-9

- B. Type the ID and password and press **OK** to confirm. The maximum number of characters is 14.

2. To configure the ID and password for GV IP device connection, follow the steps below.

- A. On the main menu, select the  icon and press **OK**. This window appears.

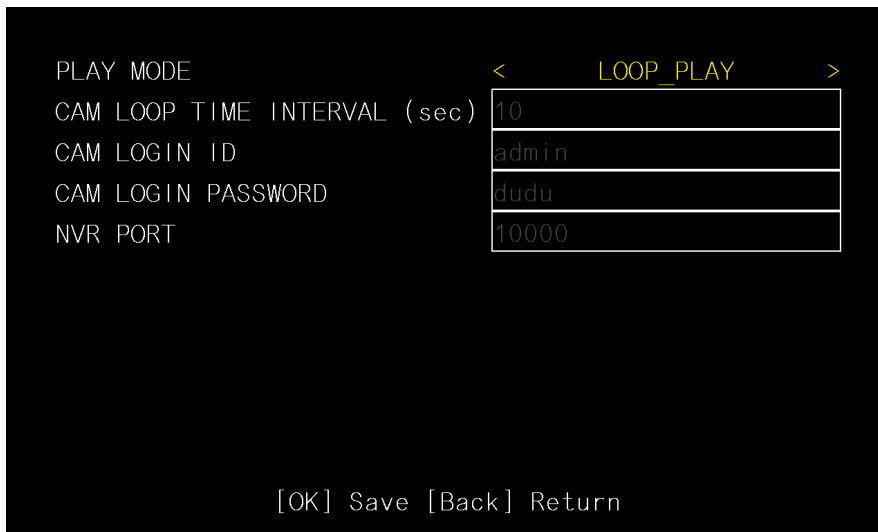



Figure 2-10

- B. Type the ID and password and press **OK** to confirm. The maximum number of characters is 15.

2.4 Displaying Channels from GV IP Devices


Use the search feature  on GV-IP Decoder Box to display channels from GV IP devices installed under the same LAN.

Before you start:

- This method only applies to GeoVision IP devices and GV-Mobile Server channels under the same LAN with GV-IP Decoder Box.
- The NVR port (of GV-IP Decoder Box) and VSS port (of GV IP Devices) or Command Port (of GV-Mobile Server) must be the same. The default NVR port is **10000**.
- The ID and password for GV-IP Decoder Box (step 2 in *2.3.2 Configuring the ID and Password*) and GV IP devices or GV-Mobile Server must be the same.

Note:

1. To add third-party IP channels, see *2.5 Displaying Channels Using GV IP Device Utility*.
 2. For details on accessing GV-Mobile Server channels, see *2.6 Displaying Channels from GV-Mobile Server*.
-

1. Select the  icon and press **OK**. The GV IP devices under the same LAN with the GV-IP Decoder Box will appear on the Device List

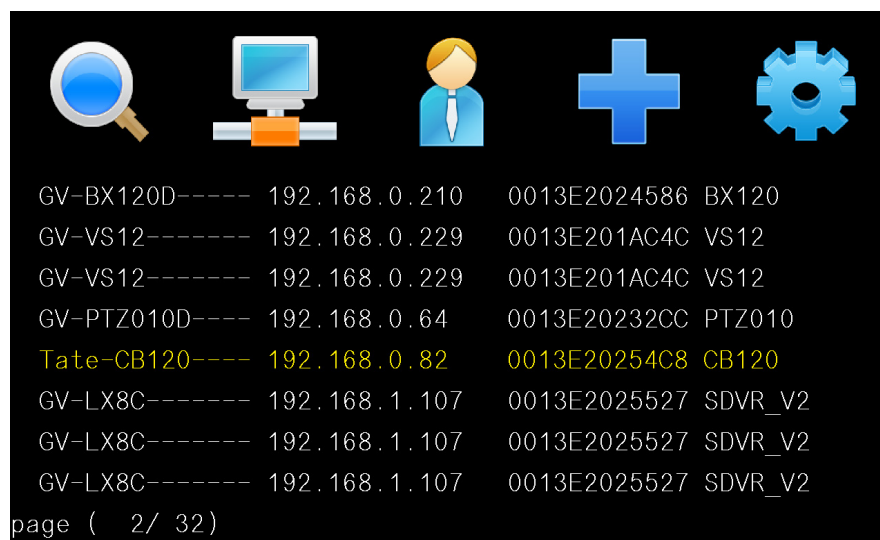


Figure 2-11

- To select a channel, press the up and down arrow keys (No.4, Figure 1-4) and press the right arrow key. The yellow shows the cursor position and the selected channels will be in red.

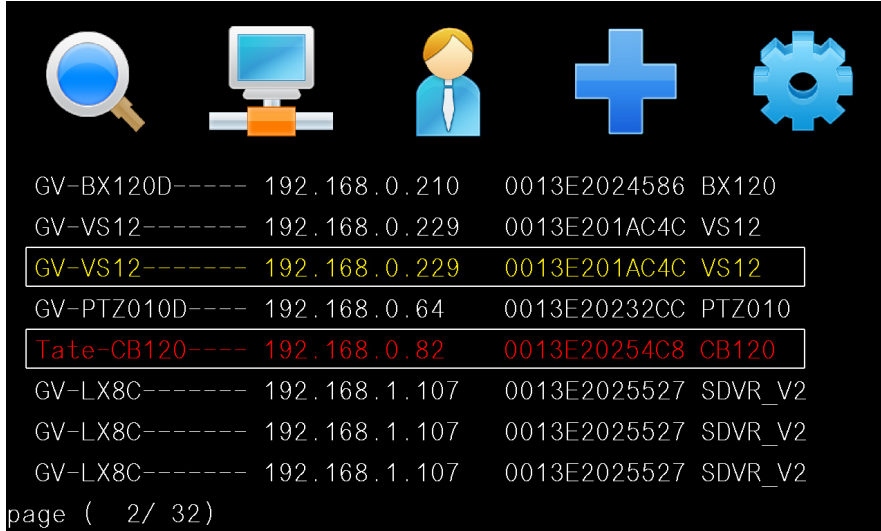



Figure 2-12

- Press the **OK** key. The selected channels will be displayed.

Note:

- When the system idles over 30 seconds or resumes after power interruption, the GV-IP Decoder Box will automatically display channels based on the last successful settings.
 - Every time when the search function  is performed, any channels selected previously on the Device List will be unselected.
-

2.5 Displaying Channels Using GV IP Device Utility

You may utilize the GV IP Device Utility to add channels from GV IP devices, GV-System (through GV-Mobile Server) and third-party IP devices that adhere to RTSP, ONVIF or PSIA.

Note:

1. The GV-IP Decoder Box can decode a total of 64 channels from GeoVision and third-party IP devices.
 2. GV IP Device Utility is available on Software DVD. ONVIF and PSIA support is only available on the GV IP Device Utility V8.5.3 or later.
-

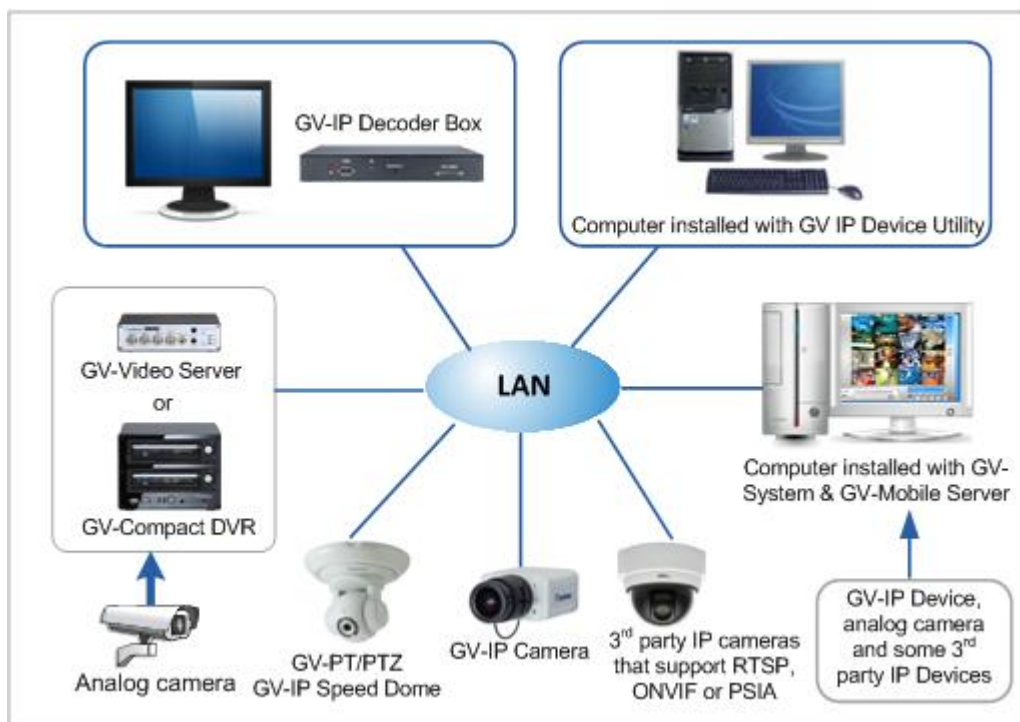


Figure 2-13

1. Make sure your GV IP devices, GV-System or third-party IP devices are under same LAN with the GV-IP Decoder Box.
2. Make sure you have installed the GV IP Device Utility program. Double-click the **GV IP Device Utility** icon on the desktop. The GV IP Device Utility window appears. It will automatically search for all the GV IP devices under the same LAN.

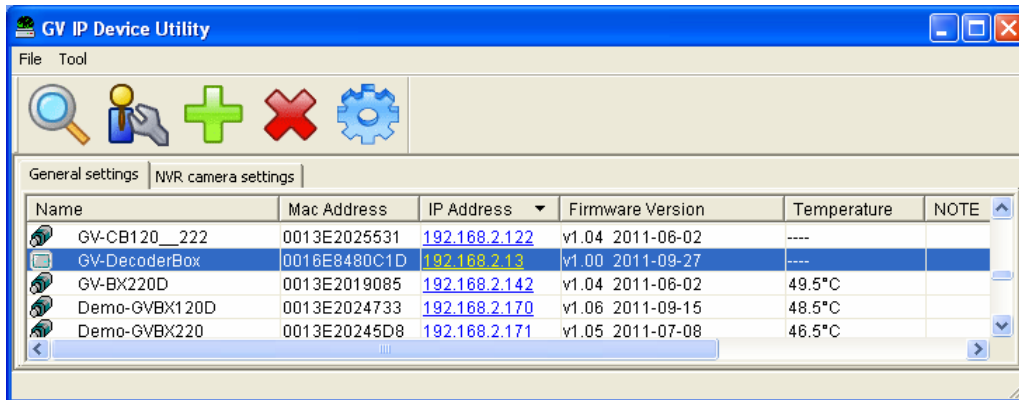


Figure 2-14

3. Click on the IP address of your GV-IP Decoder Box and select **Connect Setting**. This dialog box appears.

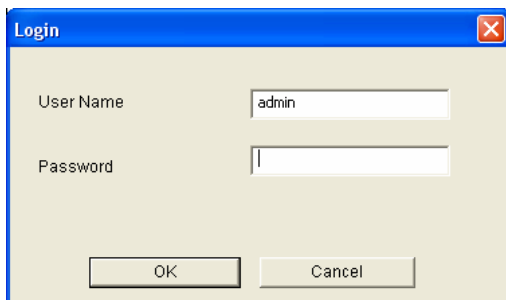


Figure 2-15

4. Type the ID and password of your GV-IP Decoder Box and click **OK**. For detail, see step 1 in 2.3.2 *Configuring the ID and Password*. The Video Connection Setting window appears.

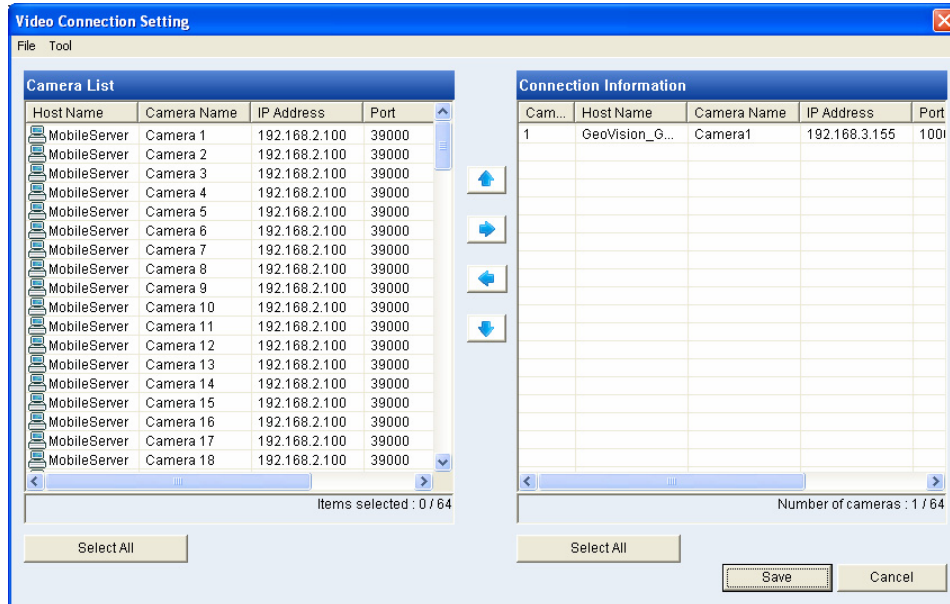



Figure 2-16

5. To connect to a GV IP device or devices from GV-System, use the **right**  button to add the device.

IMPORTANT: To connect to GV-Mobile Server channels, see 2.6 *Displaying Channels from GV-Mobile Server*.

6. Right-click the added channel, select **Edit** and type the username and password of the channel to log in. By default, the login ID and password for all GV IP devices are **admin**.

7. To add a third-party IP camera, follow the steps below.
 - A. Click **Tool** on the Video Connection Setting window (Figure 2-16), and select **Add Camera**. This dialog box appears.

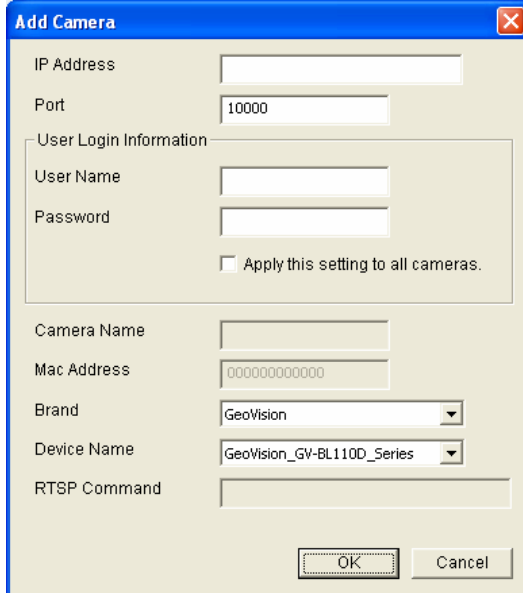


Figure 2-17

- B. Type the IP address, user name and password of the device.
- C. Select **Protocol** for Brand and one of the following protocol for Device Name. Type the RTSP command if required. Refer to your third-party IP camera's manual for this information.

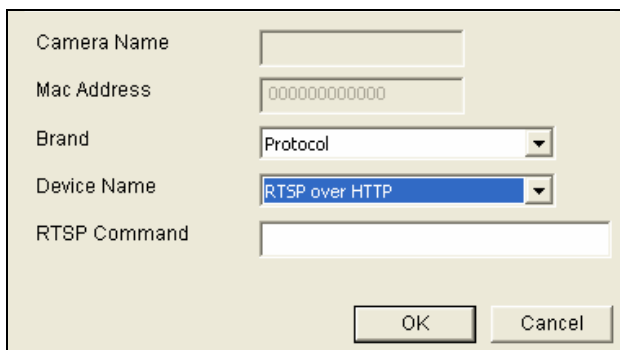


Figure 2-18

- **ONVIF:** Select this protocol if your camera adheres to ONVIF.
- **PSIA:** Select this protocol if your camera adheres to PSIA.
- **RTSP over HTTP:** The RTSP protocol uses an HTTP port for data streaming from the IP camera.

- **RTSP over TCP:** The RTSP protocol uses a TCP port for data streaming from the IP camera.
- **RTSP over UDP:** The RTSP protocol uses a UDP port for data streaming from the IP camera.

D. For **ONVIF** and **PSIA**, modify the Port to **80**, else keep the port in default.

Port	80
------	----

Figure 2-19

E. Click **OK**. The camera will be added to the list.

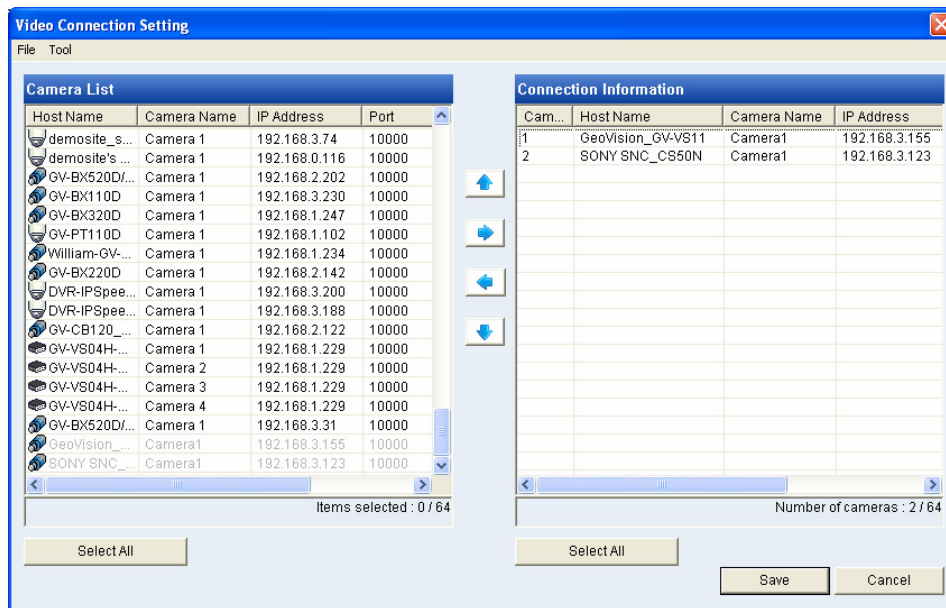


Figure 2-20

8. Use the **up** and **down** buttons to move the added channels up and down the Connection Information list. The channels will be displayed according to this order.
9. Click **Save**. The cameras on the Connection Information column will be updated to the GV-IP Decoder Box and displayed on the monitor.

Note: When the system idles over 30 seconds or resumes after power interruption, the GV-IP Decoder Box will automatically display channels based on the last successful settings.

2.6 Displaying Channels from GV-Mobile Server

The GV-Mobile Server is an application that encodes up to **32** video channels and subsequently allows the GV-IP Decoder Box to decode and display:

- video channels connected to GV-System
- IP channels connected to GV-Recording Server / GV-Video Gateway
- GeoVision IP channels
- third-party IP cameras through ONVIF and PSIA
- 4 matrix views

For details, see *GV-Mobile Server User's Manual* on GV-Mobile Server Software CD.

Note:

1. For the compatible third-party IP devices with GV-System, visit http://www.geovision.com.tw/english/4_21.asp
 2. The GV-IP Decoder Box can decode a total of 64 channels from GeoVision and third-party IP devices.
-

1. Set up the GV-Mobile Server channels. For details, refer to the following indicated sections of ***GV-Mobile Server User's Manual***.
 - A. Install the GV-Mobile Server from GV-Mobile Server Software CD. See *2.1 Installing the GV-Mobile Server*.
 - B. Execute and log in the GV-Mobile Server. See *2.2 Starting the GV-Mobile Server*.
 - C. Connect channels with GV-Mobile Server. See *Establishing Connections*, Chapter 3.
 - D. Configure the channels. See *4.1 Setting the Individual Channel*.
 - E. To set up the matrix view, see *4.2 Setting the Matrix Channel*.

2. To access GV-Mobile Server channels directly from GV-IP Decoder Box, follow the steps below.
 - A. Change the GV-Mobile Server's Command Port to **10000** to match the GV-IP Decoder Box's NVR Port.

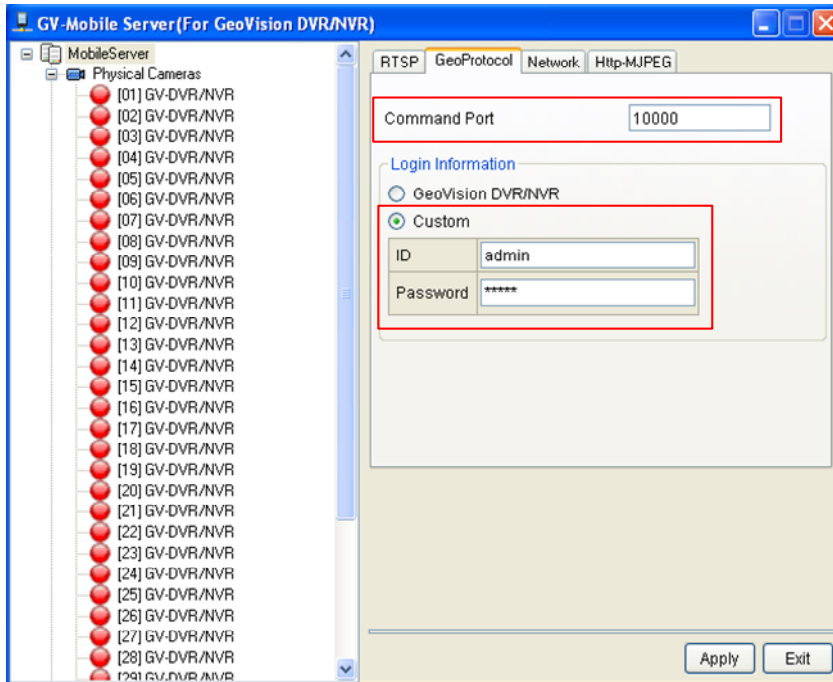



Figure 2-21

- B. On the same page, select **Custom** and type the ID and password of the GV-Mobile Server. The ID and password must match the CAM Login ID and password of the GV-IP Decoder Box (Figure 2-10).
 - C. On your GV-IP Decoder Box, use the search function  to browse and add the desired channels. For detailed steps, see *2.4 Displaying Channels from GV-IP Decoder Box* in this manual.
3. To access GV-Mobile channels through GV IP Device Utility, see *2.5 Displaying Channels Using GV IP Device Utility* in this manual.


Note: For GV-Mobile Server firmware V1.2 or earlier, modify the GV-Mobile Server's Command Port to **39000** (Figure 2-21) if you are accessing GV-Mobile Server channels through GV IP Device Utility.

2.7 Taking a Snapshot

The security administrators can capture images when events occur. Snapshot images are automatically saved to an inserted storage device such as a USB drive or SD card in JPEG format.

Before you start, be sure:

- you have inserted a USB drive or SD card for storage.
- you have at least 30 MB of space on your storage device.
- the storage type is correctly configured.

Otherwise, the error icon  will appear when attempting to capture an image.



1. On the main menu, select  and select the inserted storage device under Storage.
2. Press the  key to capture the image. A camera icon appears at the top right corner of the monitor and 3 consecutive snapshots will be taken and saved to the inserted storage device.



Figure 2-22

2.8 Pausing the Looped View



You can pause the looped view and fix the display on a single channel. To pause the looped view, press the  key. A loop sign with a cross will appear on the top-right corner of the display channel. To resume to the looped view, press the  key again.



Figure 2-23

2.9 Controlling PT, PTZ and Speed Dome Cameras

The GV-Joystick can be connected to the GV-IP Decoder Box to control GeoVision PT, PTZ cameras and Speed Dome cameras, and also third-party PTZ and Speed Dome cameras. The supported functions include zoom in, zoom out, tilt (vertical movement), pan (horizontal movement), focus in, focus out and automatic focus.


Note:

1. GV-Joystick cannot control channels accessed through GV-Mobile Server, RTSP or PSIA.
 2. GV-SD200 and third-party cameras must be connected through ONVIF.
 3. The Previous and Next buttons of GV-Joystick are not supported on GV-IP Decoder Box.
 4. The Focus In / Out buttons are not supported on GV-PT110D.
-

1. Connect a GV-Joystick to the USB port on the front panel. Once the GV-Joystick is connected, the PTZ icon will appear on the channels that support the device.



Figure 2-24

2. If you have more than one channel under display, press the  key to lock the display channel at the PTZ camera. See 2.8 *Pausing the Looped View*.
3. You can now start to control the camera using the GV-Joystick.

Tip: To automatically focus the channel view, press the **Focus In** and **Focus Out** buttons on the GV-Joystick at the same time.

Chapter 3 System Setup

When the GV-IP Decoder Box is connected and powered on, the main menu appears on your display monitor:

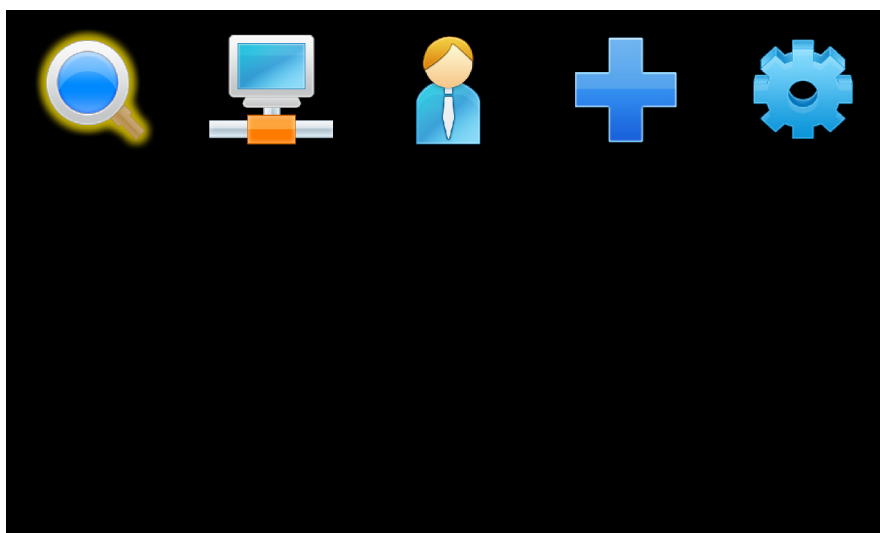








Figure 3-1

Icon	Main Functions
	Search for GV IP devices and GV-Mobile Server under the same LAN with the GV-IP Decoder Box and generates a Device List. For detail, see <i>3.1 Searching IP Devices</i> .
	Contains network settings of the GV-IP Decoder Box. For detail, see <i>2.3.1 Setting Up the Network</i> .
	Contains the settings for IP devices to be displayed on GV-IP Decoder Box. For detail, see <i>3.3 Configuring the Play Mode</i> .
	Adds a GV IP device to the GV-IP Decoder Box Device List and contains sorting options for the Device List. For detail, see <i>3.4 Adding a GV IP Device</i> .
	Contains settings for account, storage, monitor type, resolution, and firmware upgrade. For detail, see <i>3.5 Configuring the Account, Storage and Output Type</i> .

3.1 Searching IP Devices

You can search the GV IP devices and Mobile Server under the same LAN with the GV-IP Decoder Box.

1. Use the arrow keys to select  and press **OK**. The message “Waiting to Scan” appears.
2. Wait for a few seconds and the Device List appears.

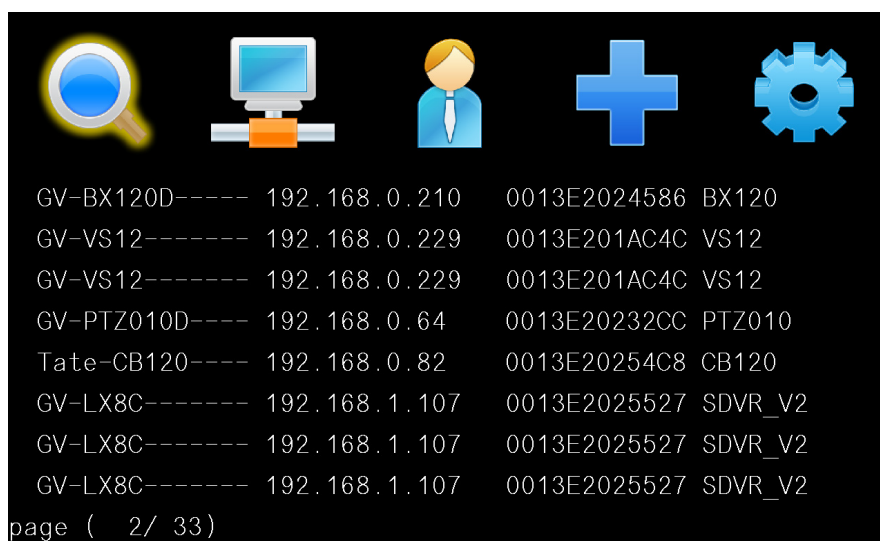



Figure 3-2

3. Use the  and the  keys to view the list.

3.2 Configuring the Network

To configure the network settings for the GV-IP Decoder Box, see *2.3.1 Setting Up the Network*.

3.3 Configuring the Play Mode

You can configure the play mode for the live view display. On the main menu, select  and press **OK**. This window appears.

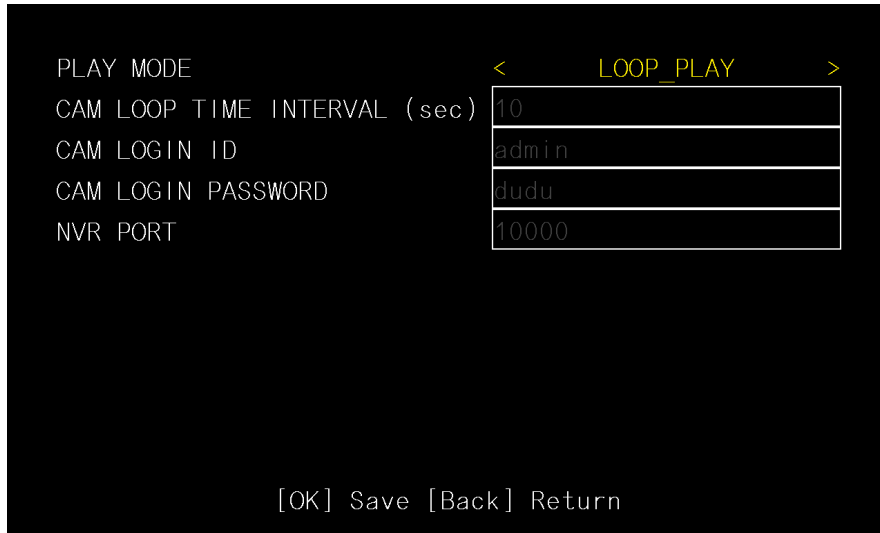



Figure 3-3

- **CAM Loop Time Interval:** Enter the time interval (in seconds) between each looped channel. The valid range is from 10 to 600. The default is **30** seconds.
- **CAM Login ID:** Enter the ID of the camera. The default is **admin**. The maximum number of characters is 15.
- **CAM Login Password:** Enter the password of the camera. The default is **admin**. The maximum number of characters is 15.
- **NVR Port:** Keep the NVR port in default (**10000**). Modify it only when necessary.

Note: The channels added directly with GV-IP Decoder Box for display must also have the same ID and password established here.

3.4 Adding a GV IP Device

You can manually add a GV IP device, select the sorting method and configure the displayed information on the Device List. On the main menu, select  and press **OK**. This window appears.

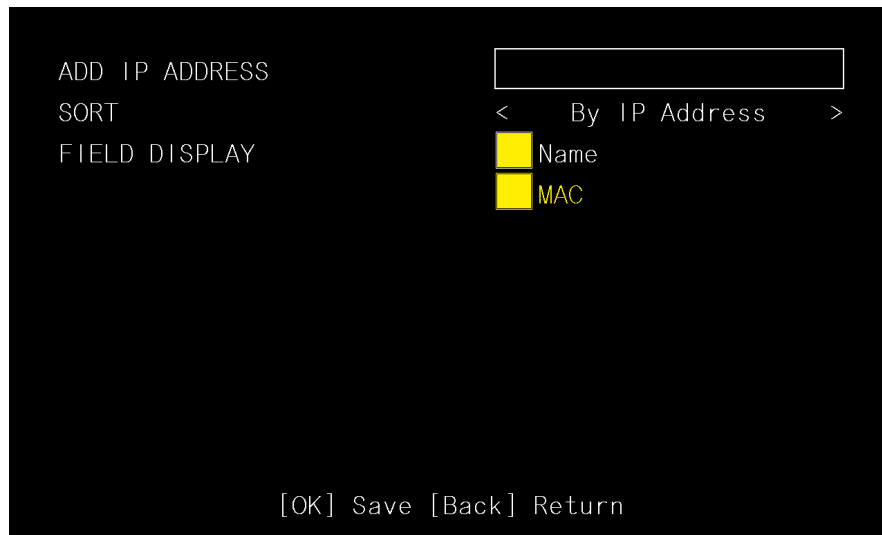


Figure 3-4


- **Add IP Address:** Type the IP address of the GV IP device.

Note: This function is not applicable to adding third-party IP devices. To add third-party IP cameras, see [2.5 Displaying Channels Using GV IP Device Utility](#).

- **Sort:** Sort the Device List (Figure 3-2) according to IP address, MAC address, camera name or NONE. (When NONE is selected, the IP devices will be listed in the order of search). The default is **By IP Address**.
- **Field Display:** Select or unselect the device name and/or MAC address displayed on the Device List. The yellow block represents a selected option.

Tip: Select the **Name** option only to display the device name and the channel number.

3.5 Configuring the Account, Storage and Output Type

You can configure the account information, select storage and monitor connector, and look up firmware version. On the main menu, select  of the GV-IP Decoder Box and press **OK**. This window appears.

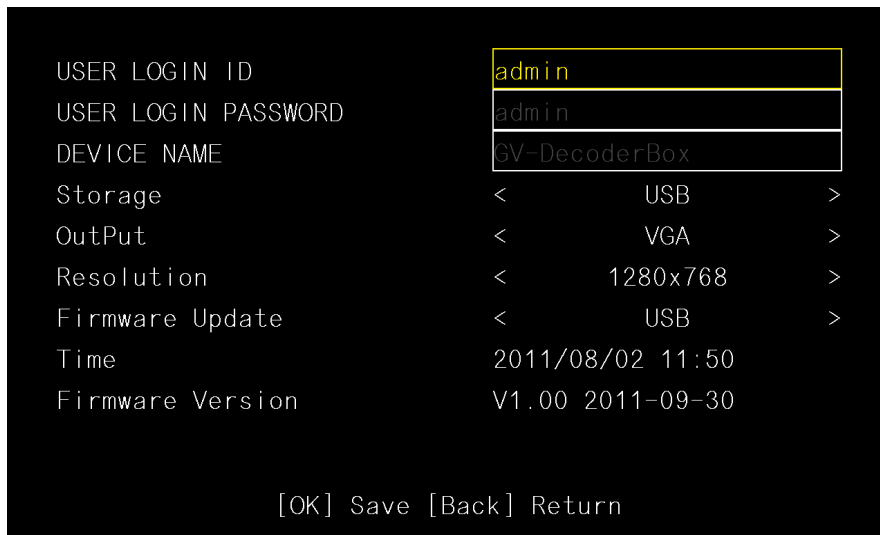


Figure 3-5

- **User Login ID:** Type the login ID for the GV-IP Decoder Box. The default is admin. The maximum number of characters is 14.
- **User Login Password:** Type the password for the GV-IP Decoder Box. The default is admin. The maximum number of characters is 14.
- **Device Name:** Name your GV-IP Decoder Box.
- **Storage:** Select the inserted storage device (**USB** or **SD**).
- **Output:** Select the output format between **VGA** and **HDMI**. The available options for resolution will be automatically brought up.
- **Resolution:** Select a resolution. The system will reboot when the resolution is modified.
- **Firmware Update:** Select the device that stores the firmware files (**USB** or **SD**). For upgrading steps. See *3.6 Upgrading the Firmware*.
- **Firmware Version:** Displays the firmware version of the device.


3.6 Upgrading the Firmware

We will periodically release the updated firmware on the website. You may choose to update firmware locally using a USB drive or SD card, or remotely through the GV IP Device Utility program.

Before you start:

- Be sure you have inserted a storage device (USB drive or SD card) and it contains one firmware file only.
- Be sure the **Storage** field matches the inserted device type. For details, see 3.5 *Configuring the Account, Storage and Output Type*.
- The USB drive or SD card must have at least 100 MB of free space.

3.6.1 Updating Firmware through USB Drive or SD Card

1. Copy the firmware file to the root folder of a USB storage device or a SD card.
2. Connect the USB drive or SD card to the GV-IP Decoder Box.
3. On the setup menu, select  and press **OK**. This window appears.

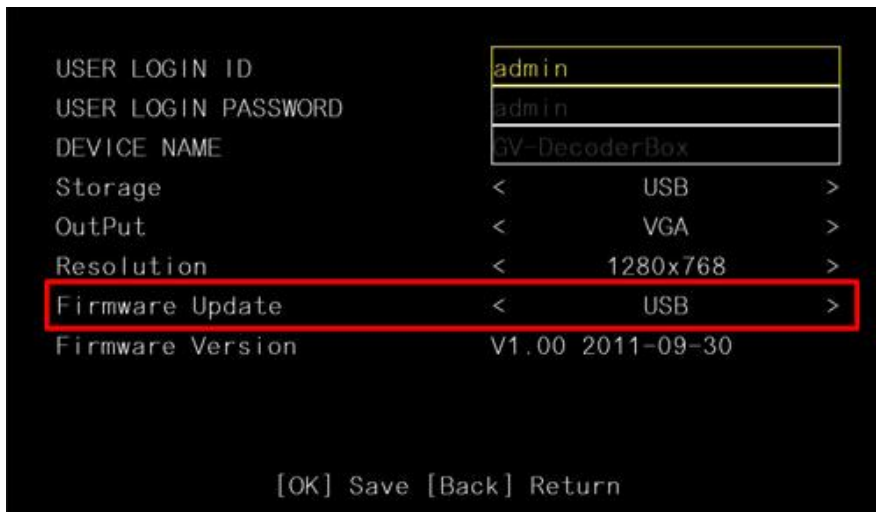


Figure 3-6

4. In the **Firmware Update** field, select **USB** or **SD** storage that stores the firmware file.
5. Press **OK**. The firmware upgrade runs automatically, and the GV-IP Decoder Box will restart after the firmware upgrade is completed.

3.6.2 Updating Firmware through GV IP Device Utility

1. Make sure you have installed the GV IP Device Utility program. Double-click the GV IP Device Utility icon on the desktop. This window appears.

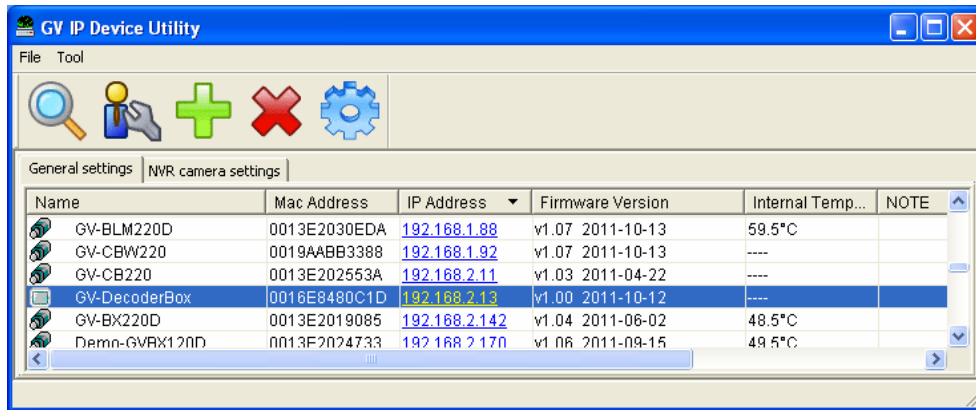


Figure 3-7

2. Click on the IP address of your GV-IP Decoder Box and select **Configure**. This window appears.

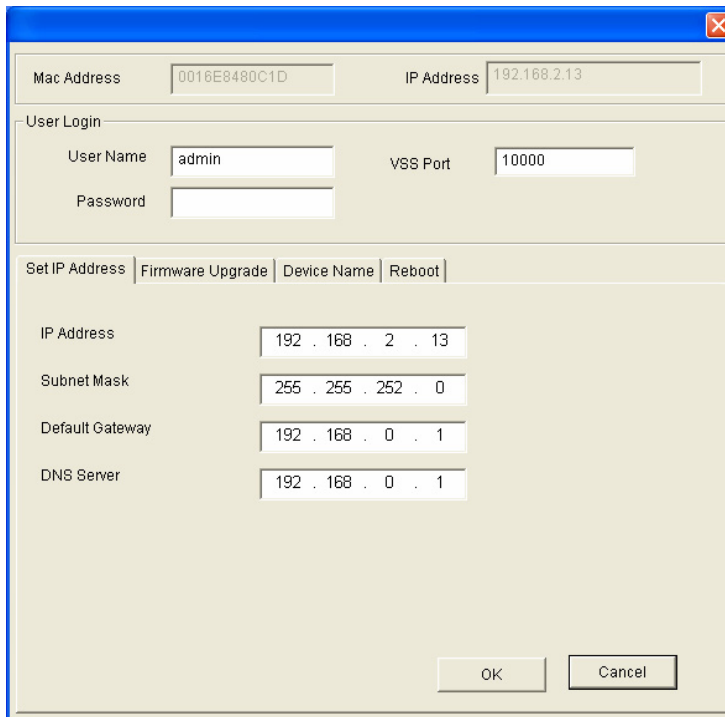


Figure 3-8

3. Select the **Firmware Upgrade** tab, type the User Name and Password, and click the **Browse** button to locate the firmware file saved at your local computer.

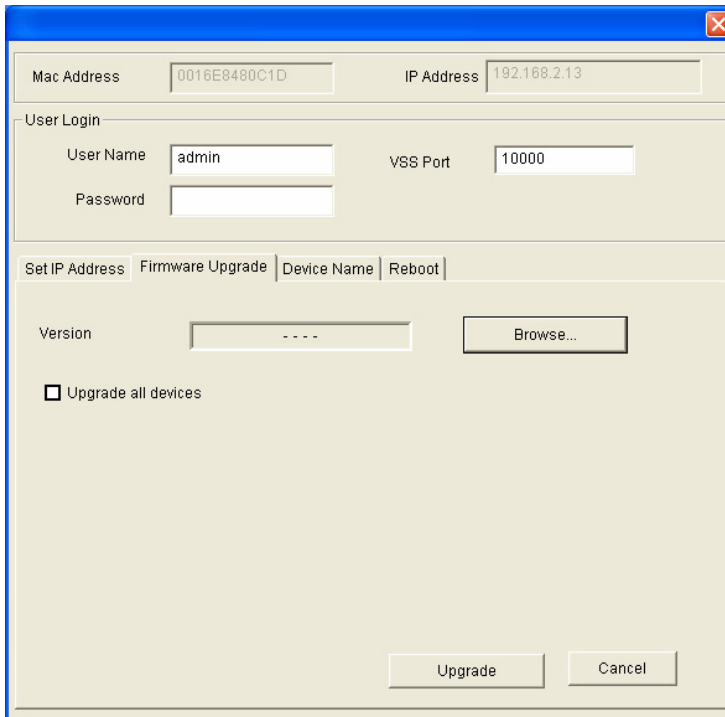


Figure 3-9

4. Type the password and click **Upgrade** to start upgrading. The system will reboot itself when the upgrade is completed.

Specifications

Video

Video Codec	H.264	
Video Output at 60 Hz	HDMI	VGA
	480p	640 x 480
	720p	1024 x 768
	1080i	1280 x 768
	1080p	1366 x 768

Network

Interface	10/100 Ethernet
Protocol	TCP, RTSP, ONVIF, PSIA

Mechanical

IR Remote Control	Yes	
Connectors	Power	12V DC Jack
	Ethernet	RJ-45
	Monitor Output	HDMI, VGA
	Local Storage & Firmware Upgrade	USB slot (2.0 backward compatible, FAT32 format) SD card slot (for Class 6 card or above, FAT32 format)

General

Operating Temperature	0°C ~ 40°C / 32 °F ~ 104 °F
Operating Humidity	20 % ~ 80 % (with no condensation)
Dimensions (W x H x D)	182.5 × 29 × 141.5 mm / 7.19 × 1.14 × 5.58 in
Net Weight	615 g / 1.36 lb
Power	DC 12 V
Power Consumption	36 W (max. 3 A at 12V DC)
Regulatory	CE, FCC compliant
Language	English

All specifications are subject to change without notice.

GV-Pad



Chapter 4 Introduction

The GV-Pad is a panel device that decodes and displays incoming IP streams from GeoVision and third-party IP devices. It is light-weighted and requires only minimal amount of installation. As a standalone device, the GV-Pad is self equipped with a display screen and supports almost all the features of a GV-IP Decoder Box. Through the network, a GV-Pad can receive and manage up to 64 IP streams. The administrators can monitor channels, take snapshots of critical moments and pause at a specific channel when events occur, all through the supplied remote control. GV-Joystick can be installed to control GeoVision and third-party PT / PTZ / Speed Dome cameras.

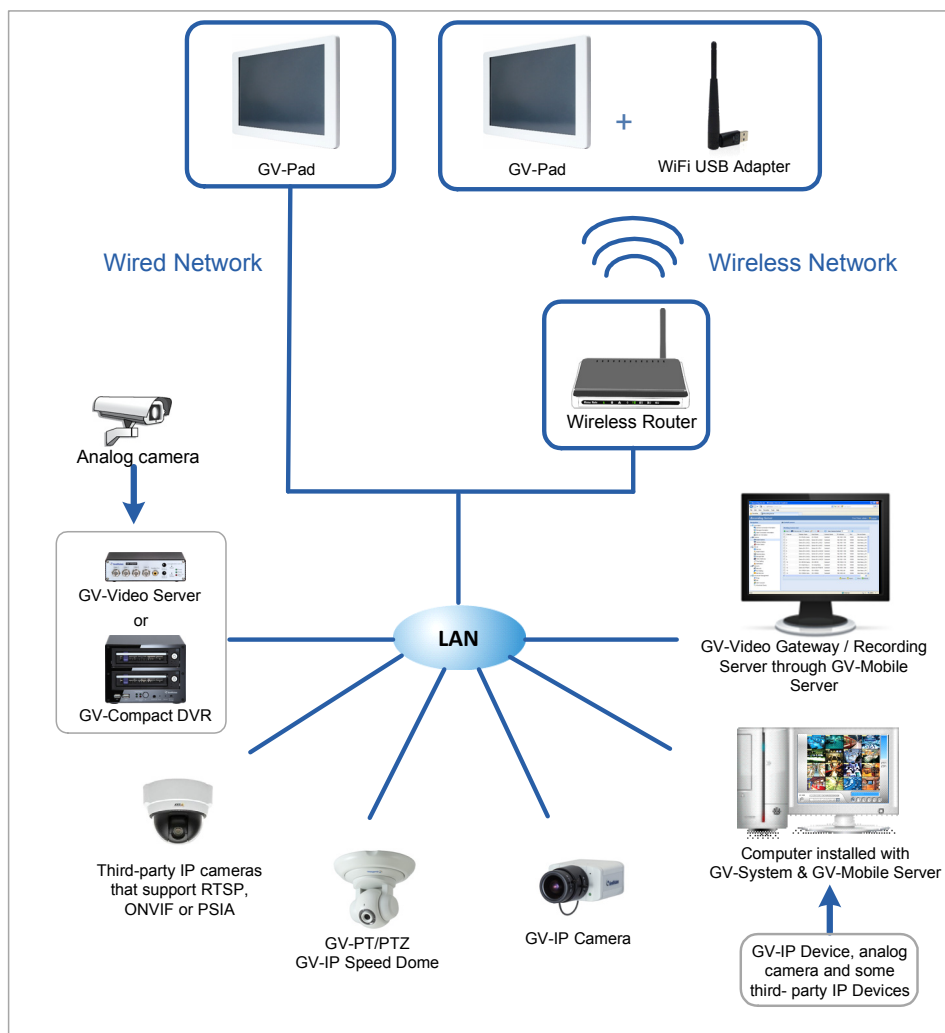


Figure 4-1

4.1 Features

- Decode video streams in H.264 codec at a maximum frame rate of the IP device
- Decode up to 5 megapixel IP cameras
- Decode up to 64 IP streams
- Support for third-party IP cameras that adhere to RTSP, ONVIF or PSIA
- Support for display of Matrix view through GV-Mobile Server
- Support for 10/100 Ethernet over LAN
- Support for Wi-Fi
- Support for single and sequential display
- Support for GV-Joystick control of GV-PTZ010D, GV-PT110D and GV-IP Speed Dome and third-party PTZ / Speed Dome cameras (through ONVIF)
- Support for remote firmware upgrade, IP address configuration and addition of new channel
- IR remote control
- SD card and USB drive for snapshot storage and firmware upgrade



4.2 Compatible Devices

The GV-Pad compatible devices are the same with those for GV-IP Decoder Box. For detail, see *1.2 Compatible Devices*.

4.3 Packing List

1. GV-Pad × 1
2. IR remote control × 1
3. Magnetic hinge x 1
4. Screw x 4
5. AC/DC adapter × 1 (12 V, 3 A, 36 W)
6. Power cord x 1
7. Software DVD x 1
8. GV-IP Decoder Box / GV-Pad Quick Start Guide

4.4 Optional Accessories

Optional Accessories	Detail
<p data-bbox="320 405 491 439">GV-Joystick</p> 	<p data-bbox="639 416 1358 539">The GV-Joystick facilitates focusing, zooming, panning, tilting of GeoVision and third-party PT, PTZ and Speed Dome cameras on GV-Pad.</p> <ul data-bbox="639 584 1123 730" style="list-style-type: none"> ● GV-Joystick x 1 ● USB Type A to Type B Cable x 1 ● GV-Joystick User's Manual x 1
<p data-bbox="256 790 560 824">GV-WiFi USB Adapter</p> 	<p data-bbox="639 790 1378 965">The GV-WiFi USB adapter is a plug-and-play device that provides wireless connectivity to GeoVision IP devices. The GV-WiFi USB Adapter complies with IEEE802.11 b/g/n (Draft 3.0) standards for wireless networking.</p>

4.5 Overview

This section identifies the components of the GV-Pad.

4.5.1 Right Panel View

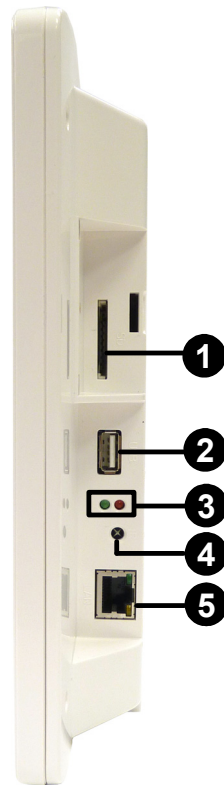


Figure 4-2

No.	Name	Function
1	SD Card Slot	Connect to an SD card for local storage of snapshot and firmware upgrade.
2	USB	Connect to a GV-Joystick, or to a USB storage device or a GV-WiFi USB Adapter.
3	LED Indicators	The green LED indicates the system is ready for use. The red LED indicates the power is supplied.
4	IR	Built-in IR receiver to receive the IR signals from the IR remote control.
5	Network	Connect to the network.

4.5.2 Left Panel View

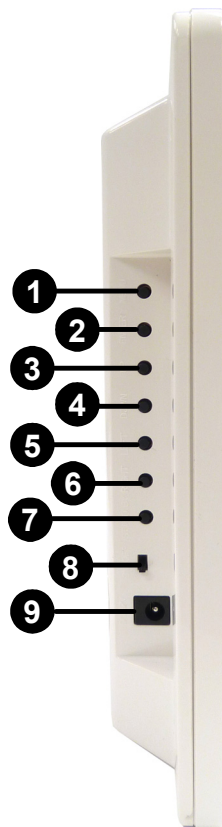


Figure 4-3

No.	Name	Function
1.	MENU	<ul style="list-style-type: none"> ● Switch to the setup menu. ● Load default: Press for 10 seconds to load default settings.
2	ENTER	<ul style="list-style-type: none"> ● Save settings in the Setup Menu. ● Display selected channels.
3	UP	Move the cursor up.
4	DOWN	Move the cursor down.
5	LEFT	<ul style="list-style-type: none"> ● Move the cursor left. ● Unselect a channel on the Device List.

No.	Name	Function
6	RIGHT	<ul style="list-style-type: none">● Move the cursor right.● Select a channel on the Device List.
7	STAND BY	Press to enter the Standby mode. In the standby mode, the screen turns off to minimize power consumption. Press the key again to enter the ON mode.
8	Power OFF/ON	Switch the power on or off.
9	DC 12V	Connect to power using the supplied power adapter.

4.6 The IR Remote Control

The supplied IR remote control for GV-Pad is the same with GV-IP Decoder Box. For the functions of each key, see *1.6 The IR Remote Control*.

Note: The **Menu**, **OK**, **Arrow**, and **Power** keys on the IR remote control are also available on the left panel of the GV-Pad. For detail, see *4.5.2 Left Panel View*.

Chapter 5 Getting Started

5.1 Installing the GV-Pad

The GV-Pad can be used as a desktop device, installed on the wall or adhere to a magnetic surface.

Note: To mount your GV-Pad on the wall, be sure to prepare 4 screws to secure the device to the wall.

1. Secure the magnetic hinge to the back of the GV-Pad with 4 screws.
2. Adjust the angle of the magnetic hinge according to your needs.
3. To install the GV-Pad on a wall, secure the magnetic hinge with self-prepared screws.
4. Connect the necessary wires and cables. See *5.2 Connecting the GV-Pad*.

5.2 Connecting the GV-Pad

Follow the steps below to connect the GV-Pad:

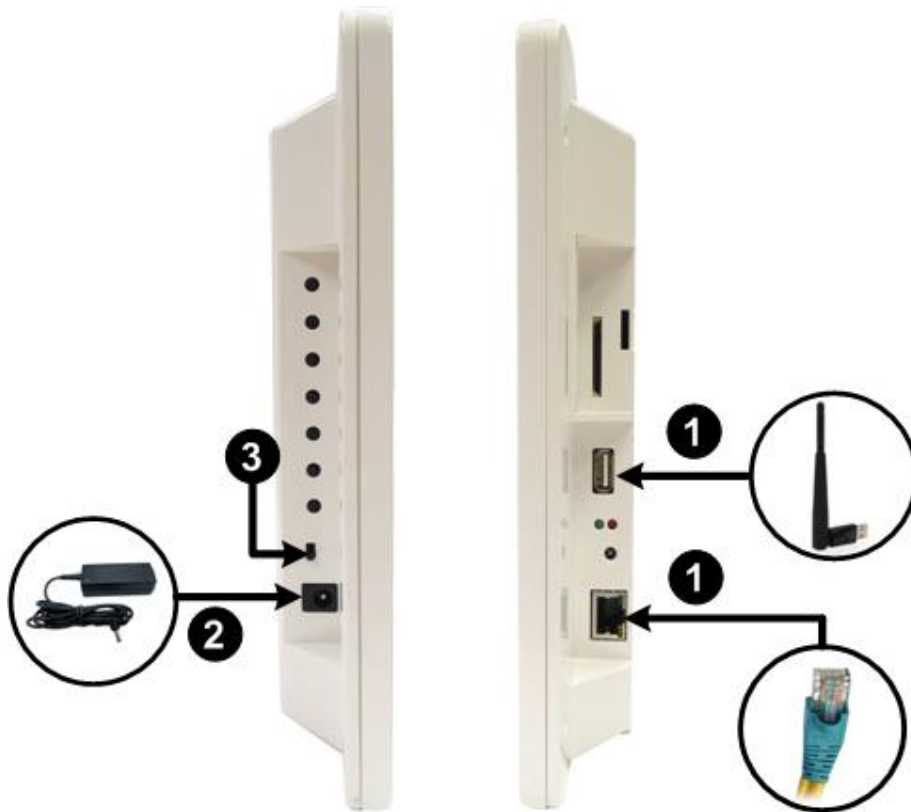


Figure 5-1

1. Connect the device to LAN.
 - A. For wired network, connect to a standard network cable.
 - B. For wireless network, insert a Wi-Fi USB adapter.
2. Connect to power using the supplied power adapter.
3. Turn the Power switch to ON.

5.3 Configuring the Basics

The default IP address, ID and password of GV-Pad are as below:

Default Settings	
IP Address	Randomly assigned by the DHCP server
ID & Password (for accessing GV-Pad through GV-IP Device Utility)	admin / admin
ID & Password (for connecting GV-Pad and GV IP devices)	admin / admin

Note: When connecting GV IP devices to GV-Pad (see [2.4 Displaying Channels from GV IP Devices](#)), the GV IP devices need to have the same ID and password set on the GV-IP Decoder Box.

5.3.1 Setting Up the Network

Establish a wired or wireless network. For detailed steps, see [2.3.1 Setting Up the Network](#).

5.3.2 Configuring the ID and Password

To configure the ID and password for logging in the GV-Pad or for GV IP device connection, see [2.3.2 Configuring the ID and Password](#).

5.4 Displaying Channels and Using the GV-Pad

The GV-Pad can display up to 64 video channels from GeoVision and/or third-party devices. Refer to the sections indicated below to set up the channels.

Functions	Reference
To display channels from GV IP devices	See <i>2.4 Displaying Channels from GV IP Devices</i>
To display channels from Geovision and third-party IP devices	See <i>2.5 Displaying Channels Using GV IP Device Utility</i>
To display GV-Mobile Server channels	See <i>2.6 Displaying Channels from GV-Mobile Server</i>

The administrator can take snapshots, pause at a single channel and control PTZ cameras.

Functions	Reference
To take snapshots	See <i>2.7 Taking a Snapshot</i>
To pause at a channel	See <i>2.8 Pausing the Lopped View</i>
To control GeoVision and third-party PT, PTZ and Speed Dome cameras	See <i>2.9 Controlling PTZ Cameras</i>

Chapter 6 System Setup

When the GV-Pad is connected and powered on, the main menu appears:

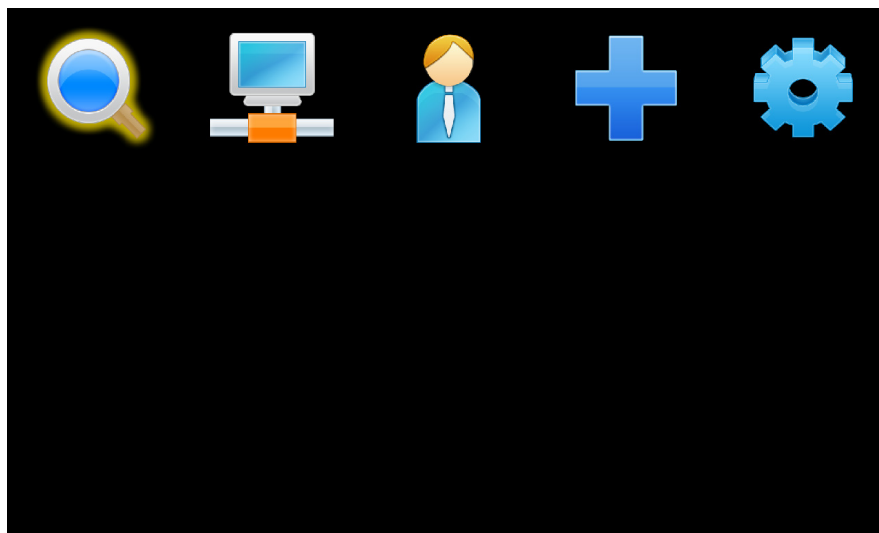







Figure 6-1

Icon	Main Functions
	Search for GV IP devices and GV-Mobile Server under the same LAN with the GV-Pad and generates a Device List. For detail, see <i>3.1 Searching IP Devices</i> .
	Contains network settings of the GV-Pad. For detail, see <i>2.3.1 Setting Up the Network</i> .
	Contains the settings for IP devices to be displayed on GV-Pad. For detail, see <i>3.3 Configuring the Play Mode</i> .
	Adds a GV IP device to the Device List and contains sorting options for the Device List. For detail, see <i>3.4 Adding a GV IP Device</i> .
	Contains settings for account, storage, monitor type, resolution, and firmware upgrade. For detail, see <i>3.5 Configuring the Account, Storage and Output Type</i> .

Specifications

Video

Video Codec	H.264
Resolution	1280 x 800

Network

Interface	10/100 Ethernet
Protocol	TCP, RTSP, ONVIF, PSIA

Mechanical

IR Remote Control	Yes	
Connectors	Power	12V DC Jack
	Ethernet	RJ-45
	Local Storage & Firmware Upgrade	USB slot (2.0 backward compatible, FAT32 format) SD card slot (for Class 6 card or above, FAT32 format)

General

Operating Temperature	0°C ~ 40°C / 32 °F ~ 104 °F
Operating Humidity	20 % ~ 80 % (with no condensation)
Dimensions (W x H x D)	342.8 × 220.3 × 38.3 mm / 13.5 x 8.7 x 1.5 in
Net Weight	1160 g / 2.6 lb
Power	DC 12 V
Power Consumption	36 W (max. 3 A at 12V DC)
Regulatory	CE, FCC compliant
Language	English

All specifications are subject to change without notice.