

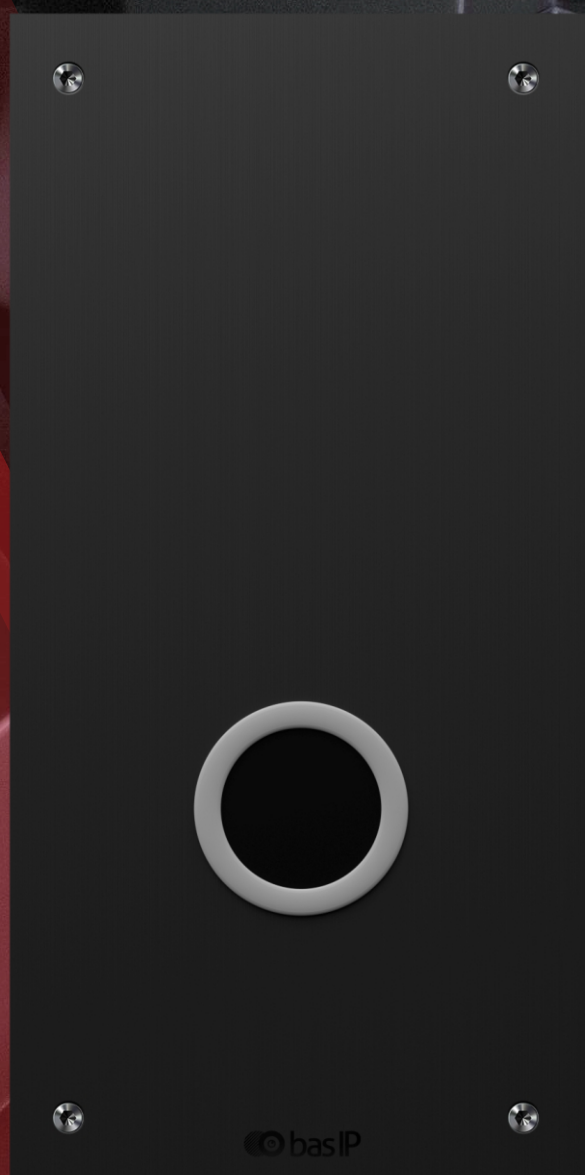


SH-46T

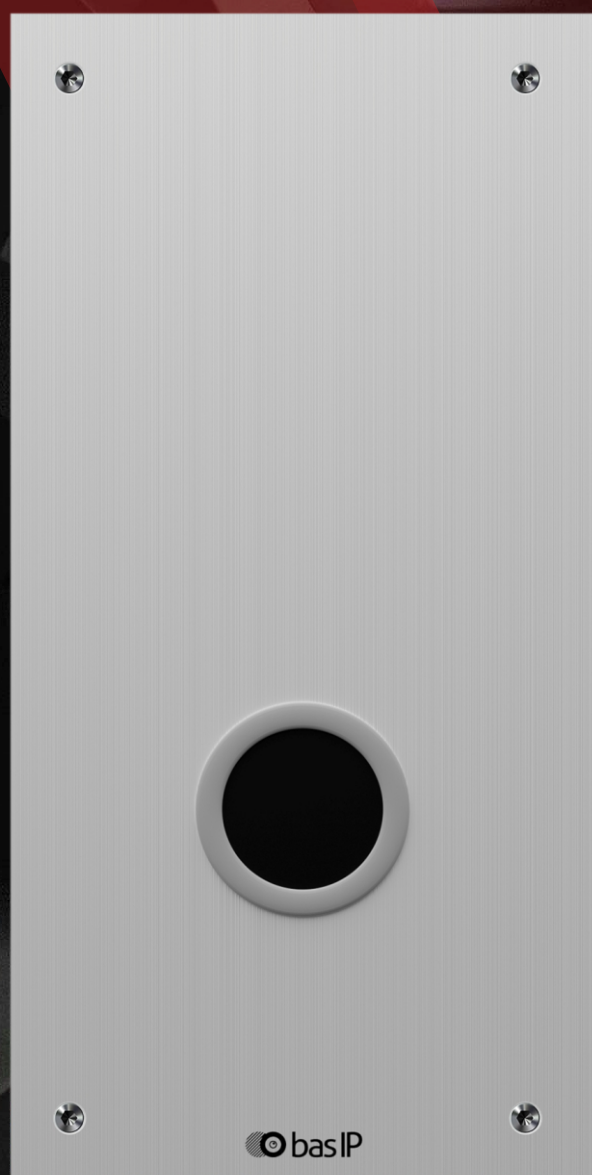

TOUCH-FREE DOORBELL

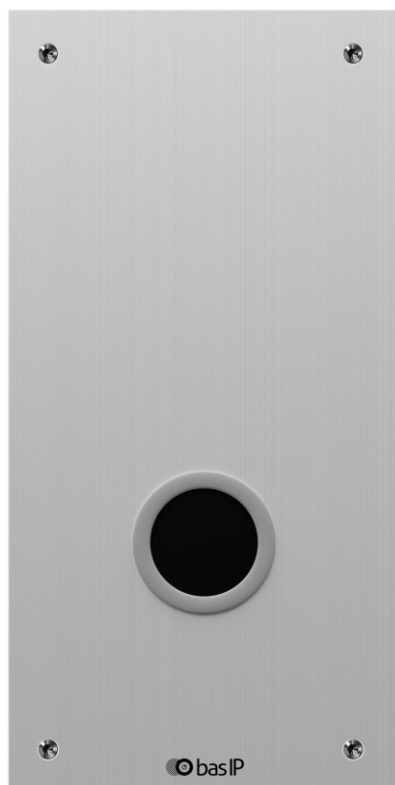


Main feature

- Touch-free doorbell with an ability to customize label.
- Power supply: +12 V DC (+ 1%, - 15%).
- Work resource: more than 100 million clicks.
- Degree of protection: IP68.
- Permissible humidity: 10% — 94%.
- Temperature condition: -27 — +60 °C.
- Response distance: 15 - 25 cm (depending on external conditions).
- Contact closure time: 50 ms.
- Body: Metal.
- Colors: Black, Silver.
- Dimensions: 95 × 190 × 19.5 mm.
- Diameter: 59 mm.

TOUCH-FREE DOORBELL

SH-46T

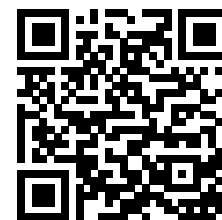

Full User Manual
wiki.bas-ip.com


Device description

BAS-IP SH-46T – no-touch doorbell for connecting to the video or audio intercom.

Due to the same size of the flush bracket, if necessary, the SH-46T can be replaced with the BAS-IP AV-04FD outdoor panel.

On the front panel of the doorbell, there is a space to engrave the apartment number, name, or company logo to identify the doorbell.

Appearance

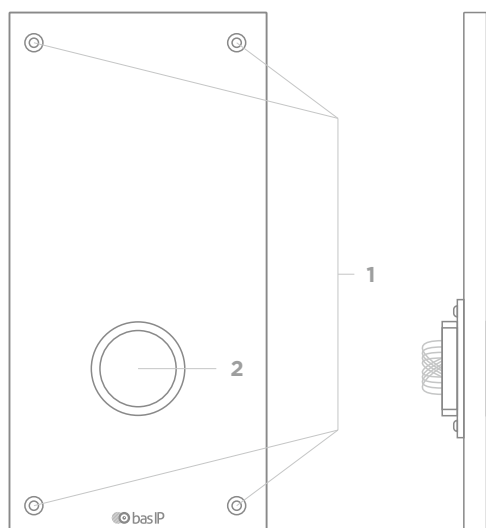

- 1 - Screw holes.
- 2 - Contactless button.

Completeness check of the product

Before installation of the door bell, it is necessary to check that it is complete and all components are available.

Exit button kit includes:

Door bell	1 pc
Flush mount bracket	1 pc
Manual	1 pc
Set screw kit	1 pc

Electrical connection


After verifying the device's completeness, you can switch to the door bell connection.

IMPORTANT

- It is strictly forbidden to supply more than + 12.5V to the SH-46TE bell.
- Do not load the output contact of the button with a current exceeding 100 mA.
- It is necessary to use a separate power supply to which locks and other high-consumption equipment are not connected.

Purpose of wires:


- Red: + 12V (+ 1%, - 15%).
- Black: Ground (General).
- Brown: Transfer to trigger mode.
- Green: Changes the backlight color to green.
- Yellow: Controlled output (when pressed, voltage is removed and ground appears).

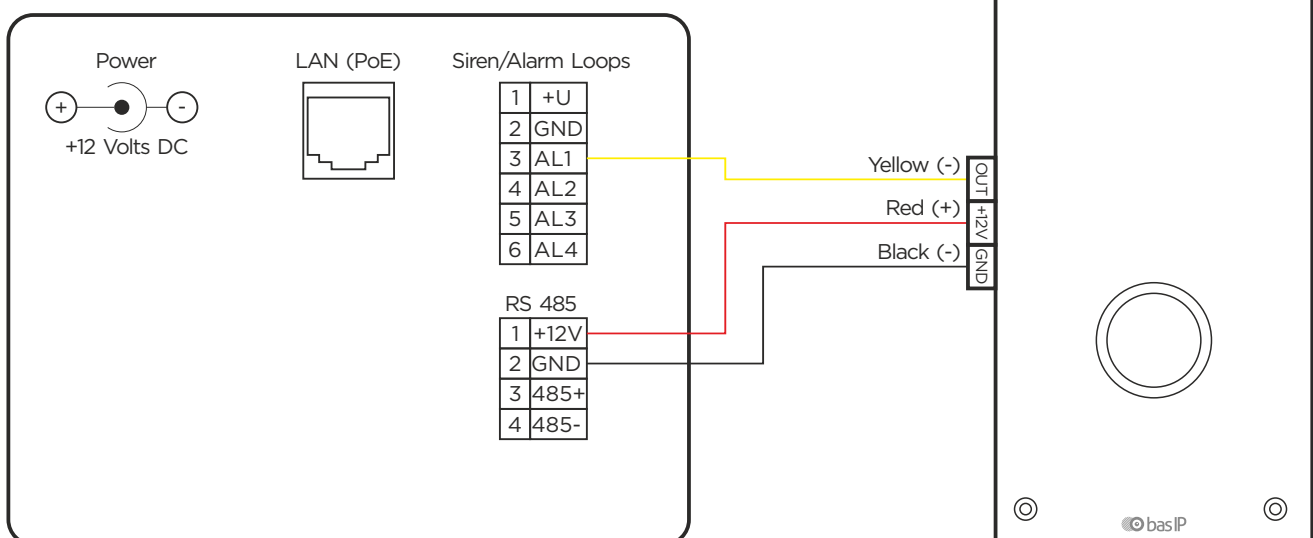


Mechanical mounting

Before mounting the door panel, a hole or recess in the wall with dimensions of 85 × 180 × 45 mm must be provided.


It is also necessary to provide supply of a power cable, additional modules and the local network.

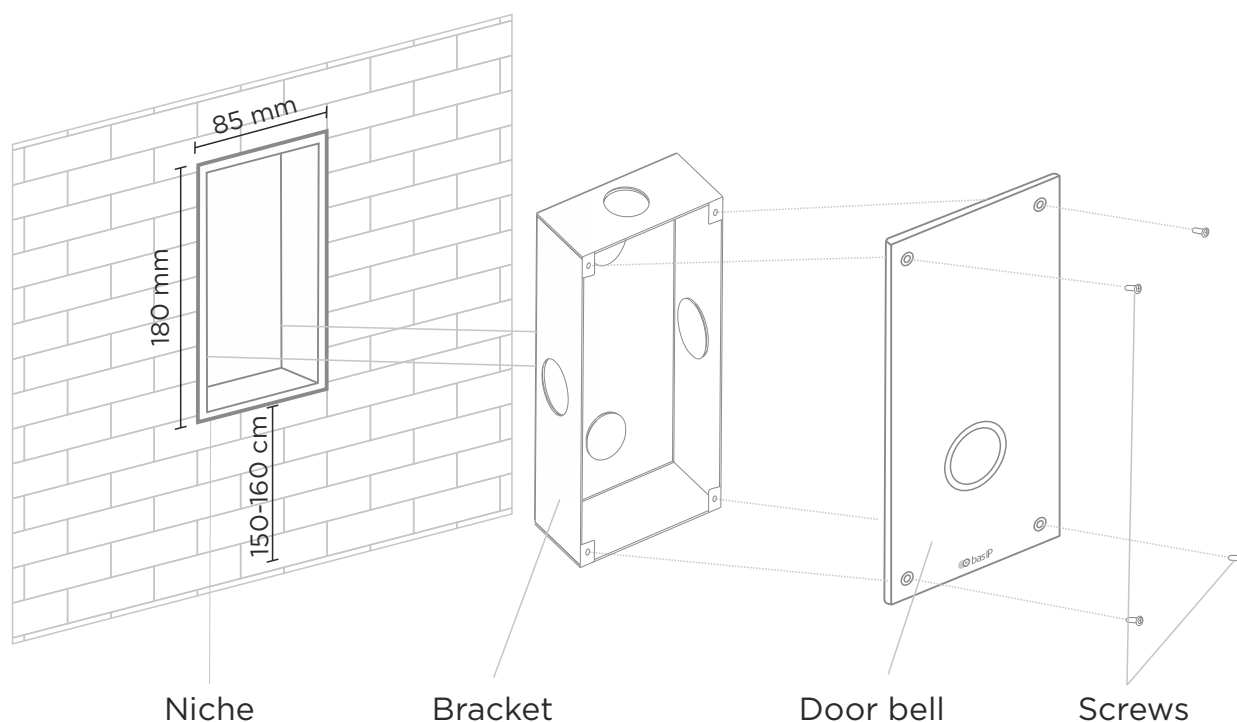

Door bell

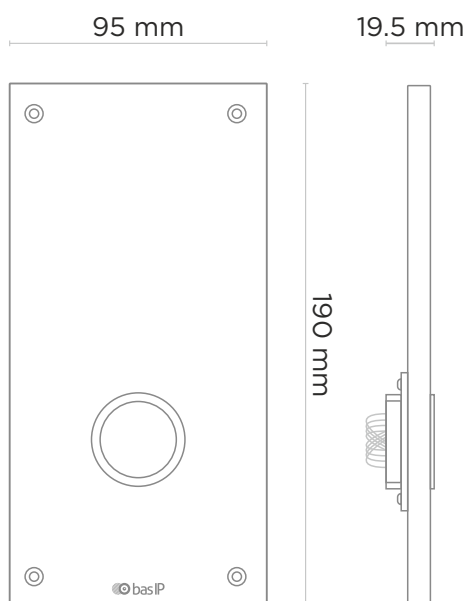

Flush Bracket

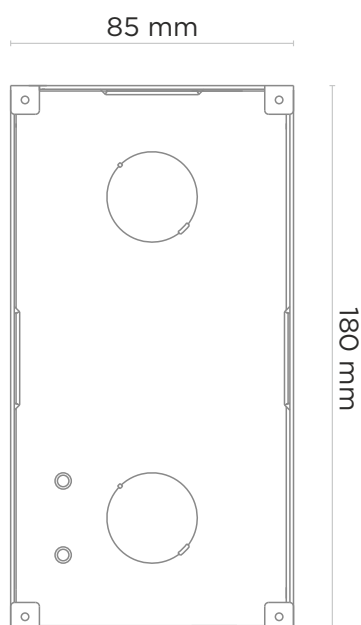

Warranty

The warranty card number

Model name

Serial number

Seller name

With following stated terms of warranty is familiar, functional test was performed in my presence:

Customer signature


Warranty conditions

The warranty period of the product — 36 (thirty-six) months from the date of sale.

- Transportation of product must be in its original packaging or supplied one by the seller.
- The product is accepted in warranty repair only with a properly filled warranty card and the presence of intact stickers or labels.
- The product is accepted for examination in accordance with the cases provided by law, only in the original packaging, in a full complete set, appearance corresponding to the new equipment and presence of all relevant properly filled documents.
- This warranty is in addition to the constitutional and other consumer rights and in no way restrict them.

Terms of warranty

- The warranty card must indicate the name of the model, serial number, purchase date, name of the seller, seller company stamp and the customer's signature.
- Delivery to the warranty repair is carried out by the buyer himself.
- Warranty repairs carried out only during the warranty period specified in the warranty card.
- The service center is committed to do everything possible to carry out the repair warranty products, up to 24 working days. The period spent on the restoration of product functionality is added to the warranty period.

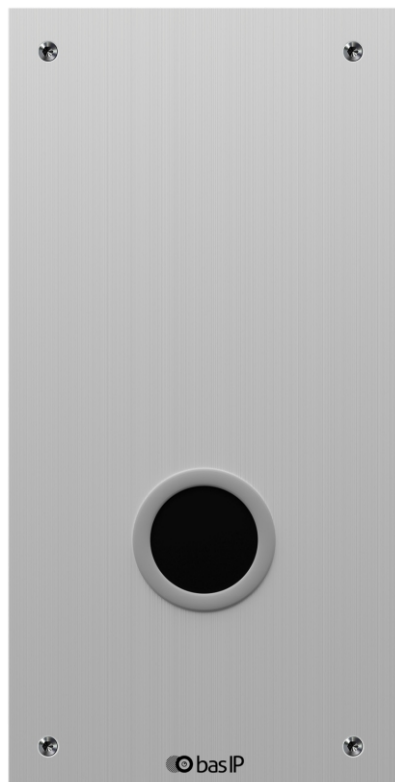

Общие характеристики

- Бесконтактный звонок с возможностью нанесения номера квартиры на лицевой панели.
- Питание: +12 В (+ 1%, - 15%).
- Ресурс работы: Более 100 миллионов нажатий.
- Класс степени защиты: IP68.
- Допустимая влажность: 10% — 94%.
- Температурный режим: -27 — +60 °С.
- Расстояние срабатывания: 15 - 25 см (в зависимости от внешних условий).
- Длительность замыкания контактов: 50 мс.
- Корпус: Металлический.
- Цветовое решение: Black, Silver.
- Размеры: 95 × 190 × 19,5 мм.
- Диаметр: 59 мм.

БЕСКОНТАКТНЫЙ ДВЕРНОЙ ЗВОНОК

SH-46T




Полная инструкция
wiki.bas-ip.com

Описание устройства

BAS-IP SH-46T – бесконтактный дверной звонок для подключения к видео или аудиодомофону.

Благодаря одинаковому размеру врезного кронштейна, при необходимости, звонок SH-46T можно заменить на вызывную панель BAS-IP AV-04FD.

Внешний вид

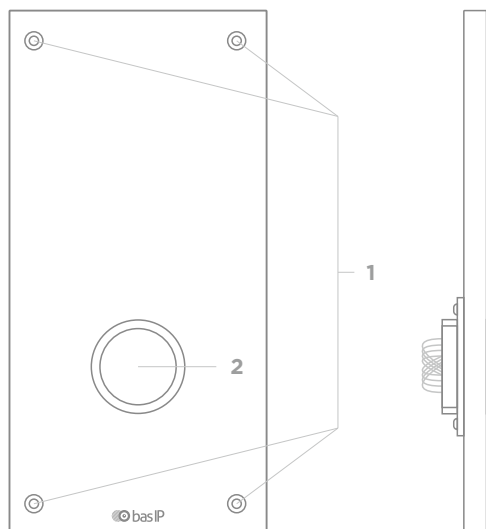

- 1 - Отверстия под винт.
- 2 - Бесконтактная кнопка.

Проверка комплектности продукта

Перед установкой бесконтактного звонка обязательно нужно проверить его комплектность и наличие всех компонентов.

В комплект панели входит:

Бесконтактный звонок	1 шт.
Кронштейн для врезной установки	1 шт.
Инструкция по установке	1 шт.
Комплект установочных винтов	1 шт.

Электрическое подключение

После проверки комплектности устройства можно переходить к подключению.


ВАЖНО

- Категорически запрещено подавать питание более чем + 12,5 В на звонок SH-46TR.
- Не допускается нагружать контакт выхода кнопки нагрузкой с током более 100 мА.
- Необходимо использовать отдельный блок питания, к которому замки и другое оборудование, с высоким потреблением, не подключены.

Назначение проводов:

- Красный: +12В (+1%, - 15%).
- Черный: Земля (Общий).
- Коричневый: Перевод в триггерный режим.
- Зеленый: Изменение цвета подсветки на зеленый.
- Желтый: Управляемый выход (снимается потенциал напряжения при нажатии кнопки и появляется земля).


потенциал напряжения при нажатии кнопки и появляется земля).

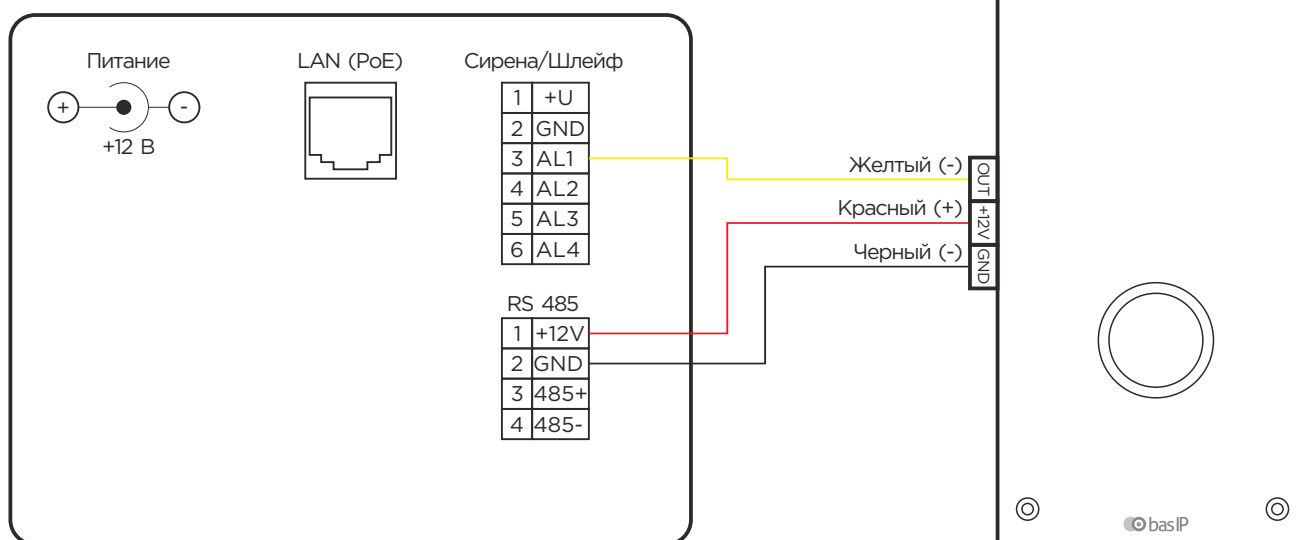


Механический монтаж

Перед монтажом вызывной панели нужно предусмотреть отверстие или углубление в стене с размерами 85 × 180 × 45 мм.


Также необходимо предусмотреть подвод кабеля питания, доп. модулей и локальной сети.

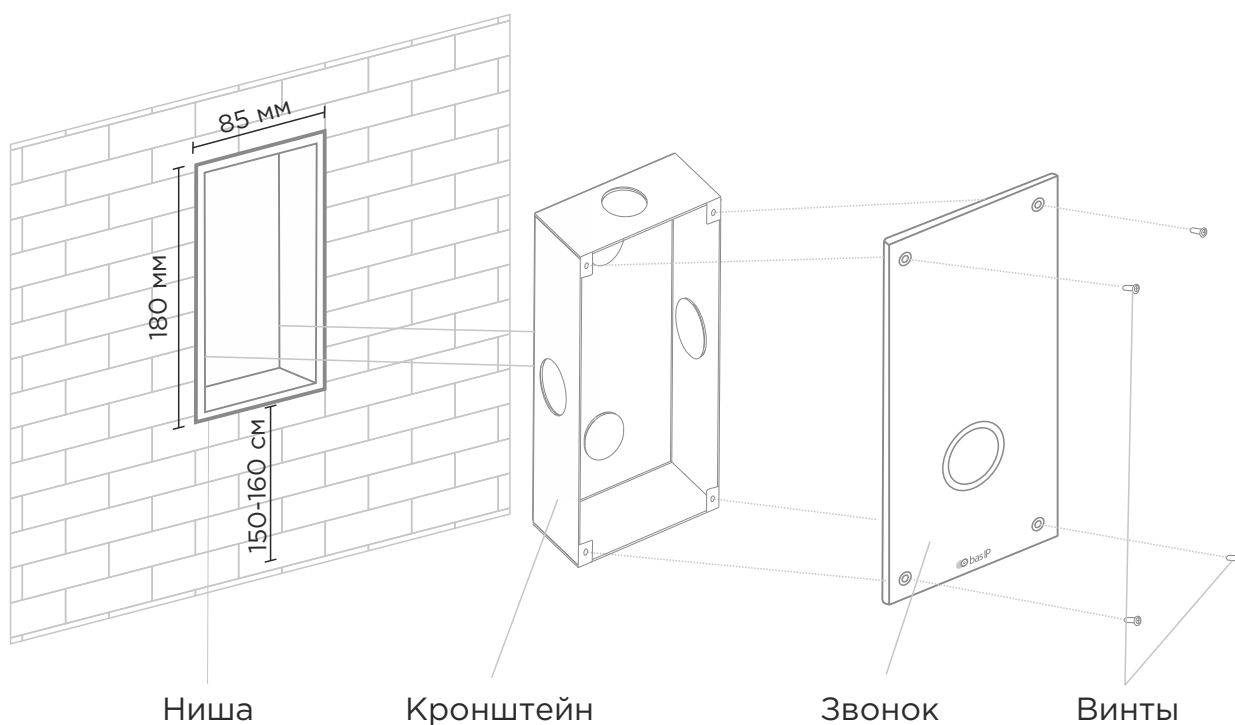

Звонок

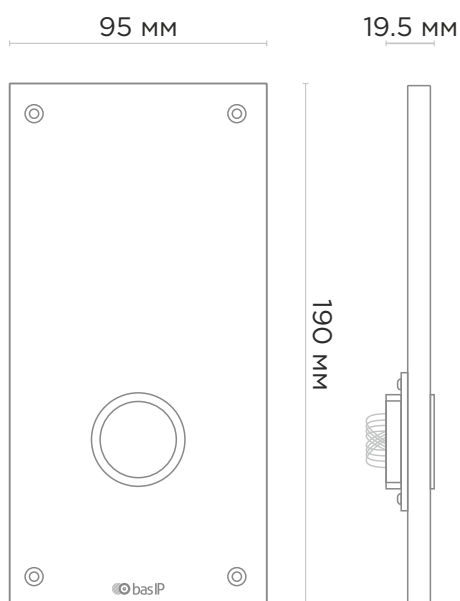

Кронштейн

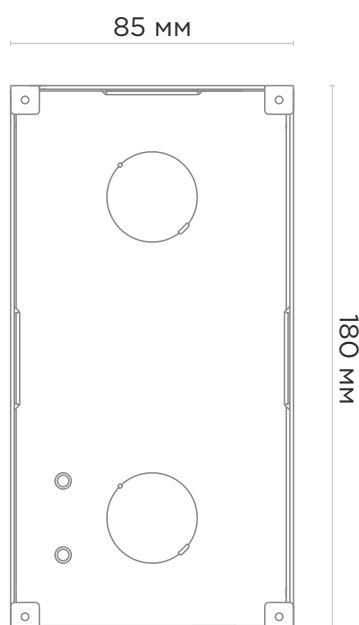

Гарантия

Гарантийный талон № _____

Наименование модели _____

Серийный номер _____

ФИО продавца _____

С нижеприведенными условиями гарантии ознакомлен, проверка работоспособности произведена в моем присутствии:

Подпись покупателя _____

Условия гарантии

Гарантийный срок эксплуатации изделия — 36 (тридцать шесть) месяцев со дня продажи.

- Транспортировка изделия должна производиться в оригинальной или поставляемой продавцом упаковке.
- Изделие принимается в гарантийный ремонт только с правильно заполненным гарантийным талоном, и наличием неповрежденных пломб или наклеек.
- Изделие принимается на экспертизу, в соответствии с предусмотренными законом случаями, только в оригинальной упаковке, полной комплектации, отвечающем новому оборудованию товарном виде, и наличию всех соответствующих правильно заполненных документов.
- Настоящая гарантия является дополнением к конституционным и иным правам потребителей и ни в коей мере не ограничивает их.

Условия гарантии

- В гарантийном талоне должно быть указано наименование модели, серийный номер, дата продажи, ФИО продавца, печать торговой организации и подпись покупателя.
- Доставка в гарантийный ремонт осуществляется самим покупателем.
- Гарантийный ремонт производится только в течение гарантийного срока указанного в данном гарантийном талоне.
- Сервисный центр обязуется сделать все возможное, для проведения ремонта гарантийного изделия, в срок до 90-а рабочих дней. Срок, затраченный на восстановление работоспособности изделия, добавляется к установленному гарантийному сроку.

Notes

Notes



www.bas-ip.com